

ET9500 QUICK START GUIDE



Start Here!

⚠ WARNING Risk of Fire or Electric Shock

- Disconnect power at the circuit breaker(s) or disconnect switch(es) before installing or servicing.
- Installation and/or wiring must be in accordance with national and local electrical code requirements.

APPLICATION NOTE: Complete the installation process per the included Installation Instructions before configuring the ET9500.

Please **write down the IP Address** of each of the ET90000 devices attached to the ET9500.

IMPORTANT: All of the devices and the BEMS/BAS connected to the ET9500 **MUST** be on the same IP subnet.

Follow the configuration steps on the chart to the right based on the protocol in use.

Configuration Steps

PROTOCOL IN USE	CONFIGURATION STEPS TO USE
BACnet®/IP	① > ⑤ > ⑥ > ⑦ > ⑧
BACnet® MS/TP	① > ② > ③ > ④ > ⑤ > ⑥ > ⑦ > ⑧
Modbus TCP/IP	① > ⑤ > ⑥ > ⑦ > ⑧
Modbus RTU	① > ② > ④ > ⑤ > ⑥ > ⑦ > ⑧
Metasys® N2	① > ④ > ⑤ > ⑥ > ⑦ > ⑧

① Protocol Selection

S Bank DIP Switch Location

Field Protocol	S0	S1	S2	S3
BACnet/IP	Off	Off	Off	Off
BACnet MS/TP	On	Off	Off	Off
Modbus TCP/IP	Off	On	Off	Off
Modbus RTU	On	On	Off	Off
Metasys N2	Off	Off	On	Off

② Baud Rate Setting

B Bank DIP Switch Location

Baud	B0	B1	B2	B3
9600	On	On	On	Off
19200	Off	Off	Off	On
38400	On	On	Off	On
57600	Off	Off	On	On
76800	On	Off	On	On

③ MAC Address Setting

A Bank DIP Switch Location

Address	A0	A1	A2	A3	A4	A5	A6	A7
1	On	Off	Off	Off	Off	Off	Off	Off
2	Off	On	Off	Off	Off	Off	Off	Off
3	On	On	Off	Off	Off	Off	Off	Off
4	Off	Off	On	Off	Off	Off	Off	Off
5	On	Off	On	Off	Off	Off	Off	Off
6	Off	On	On	Off	Off	Off	Off	Off

Never set a BACnet® MS/TP MAC Address of the ET9500 to a value from 128 to 255. All of the devices connected to the ET9500 **MUST** be on the same IP subnet.
(Please see reverse side for a complete range of MAC Address and DIP Switch Settings)

④ RS-485 Connection

BMS RS-485 Wiring	ProtoNode Pin #	Pin Assignment
+	Pin 1	RS-485 +
-	Pin 2	RS-485 -
GND	Pin 3	RS-485 GND

Connect the ET9500 to the RS-485 network wires at the 3-pin RS-485 (Field) connector on the top of ET9500.

If the ET9500 is the last device on the network segment, then the End-of-Line Termination Switch needs to be enabled. Remove housing cover and turn the EOL Switch to ON. Replace housing cover.

⑤ PC Network IP Setting

- Reconnect power at the circuit breaker(s) or disconnect switch(es).
- If the ET9500 is **NOT** on the same IP subnet as the BEMS/BAS, please follow the steps below
 - Connect a standard CAT5 Ethernet cable between the PC and ET9500.
 - The Default IP Address of ET9500 is 192.168.1.24, Subnet Mask is 255.255.255.0. If the PC and ET9500 are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network. (**NOTE:** xxx cannot equal 24.)
- If the ET9500 **IS** on the same IP subnet as the BEMS/BAS, skip Step ⑥ and proceed to Step ⑦.

⑥ IP Address Setting for Field Network

- Set the IP address of the ET9500 to be the same IP subnet as the ET90000 device(s) and the BEMS/BAS.
- Open a PC web browser, enter the default IP address of the ET9500: **192.168.1.24** into the URL field to connect to the ET9500.
- To set IP Address for Field Network select the “Network Settings” Tab from the toolbar.

Record the IP address assigned to the ET9500 for future reference.

⑦ Ethernet Connections

Ethernet Port

Connect the ET9500 using a standard CAT5 Ethernet cable to the same hub, switch or router that the ET90000 device(s) and the BEMS/BAS are connected to.

⑧ WEB Configurator

With a PC on the same IP subnet, type the IP address of the ET9500 into your web browser to open the WEB Configurator Application.

To add a profile, select the ‘Devices’ Tab from the toolbar and click the “+” button under ‘Devices’ Tab. Fill in the prompted information, then:

- Save by pressing the “disk icon”.
- Press the “refresh” icon to restart the system to load the new configuration.

Congratulations!

You have completed the ET9500 configuration process.

If you are not able to locate the profile you just created on your BEMS/BAS workstation display, please check the information in the “BEMS Interface Settings” and “Network Settings” Tabs in your Web Configurator and the “Device Instance Setting” on the reverse page of this document.

If you are still unable to locate the profile you created after adjusting these settings, please call our technical support team at 815-675-7000 or send an e-mail to us: CustomerSupport@intermatic.com.

“A” Bank DIP Switch Settings



Address	A0	A1	A2	A3	A4	A5	A6	A7	Address	A0	A1	A2	A3	A4	A5	A6	A7	Address	A0	A1	A2	A3	A4	A5	A6	A7	Address	A0	A1	A2	A3	A4	A5	A6	A7	Address	A0	A1	A2	A3	A4	A5	A6	A7	Address	A0	A1	A2	A3	A4	A5	A6	A7
1	On	Off	Off	Off	Off	Off	Off	Off	47	On	On	On	On	Off	On	Off	Off	93	On	Off	On	On	On	Off	On	Off	189	On	Off	On	On	On	On	Off	On	237	On	Off	On	On	Off	On	On	On									
2	Off	On	Off	Off	Off	Off	Off	Off	48	Off	Off	Off	Off	On	On	Off	Off	94	Off	On	On	On	On	Off	On	Off	190	Off	On	On	On	On	On	Off	On	238	Off	On	On	On	Off	On	On	On									
3	On	On	Off	Off	Off	Off	Off	Off	49	On	Off	Off	Off	On	On	Off	Off	95	On	On	On	On	On	Off	On	Off	191	On	On	On	On	On	On	Off	On	239	On	On	On	On	Off	On	On	On									
4	Off	Off	On	Off	Off	Off	Off	Off	50	Off	On	Off	Off	On	On	Off	Off	96	Off	Off	Off	Off	Off	On	On	Off	192	Off	Off	Off	Off	Off	Off	On	On	240	Off	Off	Off	Off	On	On	On	On									
5	On	Off	On	Off	Off	Off	Off	Off	51	On	On	Off	Off	On	On	Off	Off	97	On	Off	Off	Off	Off	On	On	Off	193	On	Off	Off	Off	Off	Off	On	On	241	On	Off	Off	Off	On	On	On	On									
6	Off	On	On	Off	Off	Off	Off	Off	52	Off	Off	On	Off	On	On	Off	Off	98	Off	On	Off	Off	Off	On	On	Off	194	Off	On	Off	Off	Off	Off	On	On	242	Off	On	Off	Off	On	On	On	On									
7	On	On	On	Off	Off	Off	Off	Off	53	On	Off	On	Off	On	On	Off	Off	99	On	On	Off	Off	Off	On	On	Off	195	On	On	Off	Off	Off	Off	On	On	243	On	On	Off	Off	On	On	On	On									
8	Off	Off	Off	On	Off	Off	Off	Off	54	Off	On	On	Off	On	On	Off	Off	100	Off	Off	On	Off	Off	On	On	Off	196	Off	Off	On	Off	Off	Off	On	On	244	Off	Off	On	Off	On	On	On	On									
9	On	Off	Off	On	Off	Off	Off	Off	55	On	On	On	Off	On	On	Off	Off	101	On	Off	On	Off	Off	On	On	Off	197	On	Off	On	Off	Off	Off	On	On	245	On	Off	On	Off	On	On	On	On									
10	Off	On	Off	On	Off	Off	Off	Off	56	Off	Off	Off	On	On	On	Off	Off	102	Off	On	On	Off	Off	On	On	Off	198	Off	On	On	Off	Off	Off	On	On	246	Off	On	On	Off	On	On	On	On									
11	On	On	Off	On	Off	Off	Off	Off	57	On	Off	Off	On	On	On	Off	Off	103	On	On	On	Off	Off	On	On	Off	199	On	On	On	Off	Off	Off	On	On	247	On	On	On	Off	On	On	On	On									
12	Off	Off	On	On	Off	Off	Off	Off	58	Off	On	Off	On	On	On	Off	Off	104	Off	Off	Off	On	Off	On	On	Off	200	Off	Off	Off	On	Off	Off	On	On	248	Off	Off	Off	On	On	On	On	On									
13	On	Off	On	On	Off	Off	Off	Off	59	On	On	Off	On	On	On	Off	Off	105	On	Off	Off	On	Off	On	On	Off	201	On	Off	Off	On	Off	Off	On	On	249	On	Off	Off	On	On	On	On	On									
14	Off	On	On	On	Off	Off	Off	Off	60	Off	Off	On	On	On	On	Off	Off	106	Off	On	Off	On	Off	On	On	Off	202	Off	On	Off	On	Off	Off	On	On	250	Off	On	Off	On	On	On	On	On									
15	On	On	On	On	Off	Off	Off	Off	61	On	Off	On	On	On	On	Off	Off	107	On	On	Off	On	Off	On	On	Off	203	On	On	Off	On	Off	Off	On	On	251	On	On	Off	On	On	On	On	On									
16	Off	Off	Off	Off	On	Off	Off	Off	62	Off	On	On	On	On	On	Off	Off	108	Off	Off	On	On	Off	On	On	Off	204	Off	Off	On	On	Off	Off	On	On	252	Off	Off	On	On	On	On	On	On									
17	On	Off	Off	Off	On	Off	Off	Off	63	On	On	On	On	On	On	Off	Off	109	On	Off	On	On	Off	On	On	Off	205	On	Off	On	On	Off	Off	On	On	253	On	Off	On	On	On	On	On	On									
18	Off	On	Off	Off	On	Off	Off	Off	64	Off	Off	Off	Off	Off	Off	On	Off	110	Off	On	On	On	Off	On	On	Off	206	Off	On	On	On	Off	Off	On	On	254	Off	On	On	On	On	On	On	On									
19	On	On	Off	Off	On	Off	Off	Off	65	On	Off	Off	Off	Off	Off	On	Off	111	On	On	On	On	Off	On	On	Off	207	On	On	On	On	Off	Off	On	On	255	On	On	On	On	On	On	On	On									
20	Off	Off	On	Off	On	Off	Off	Off	66	Off	On	Off	Off	Off	Off	On	Off	112	Off	Off	Off	Off	On	On	On	Off	208	Off	Off	Off	On	Off	Off	On	On																		
21	On	Off	On	Off	On	Off	Off	Off	67	On	On	Off	Off	Off	Off	On	Off	113	On	Off	Off	Off	On	On	On	Off	209	On	Off	Off	On	Off	Off	On	On																		
22	Off	On	On	Off	On	Off	Off	Off	68	Off	Off	On	Off	Off	Off	On	Off	114	Off	On	Off	Off	On	On	On	Off	210	Off	On	Off	On	Off	Off	On	On																		
23	On	On	On	Off	On	Off	Off	Off	69	On	Off	On	Off	Off	Off	On	Off	115	On	On	Off	Off	On	On	On	Off	211	On	On	Off	On	Off	Off	On	On																		
24	Off	Off	Off	On	On	Off	Off	Off	70	Off	On	On	Off	Off	Off	On	Off	116	Off	Off	On	Off	On	On	On	Off	212	Off	Off	On	Off	On	Off	On	On																		
25	On	Off	Off	On	On	Off	Off	Off	71	On	On	On	Off	Off	Off	On	Off	117	On	Off	On	Off	On	On	On	Off	213	On	Off	On	Off	On	Off	On	On																		
26	Off	On	Off	On	On	Off	Off	Off	72	Off	Off	Off	On	Off	Off	On	Off	118	Off	On	On	Off	On	On	On	Off	214	Off	On	On	Off	On	Off	On	On																		
27	On	On	Off	On	On	Off	Off	Off	73	On	Off	Off	On	Off	Off	On	Off	119	On	On	On	Off	On	On	On	Off	215	On	On	On	Off	On	Off	On	On																		
28	Off	Off	On	On	On	Off	Off	Off	74	Off	On	Off	On	Off	Off	On	Off	120	Off	Off	Off	On	On	On	On	Off	216	Off	Off	Off	On	On	Off	On	On																		
29	On	Off	On	On	On	Off	Off	Off	75	On	On	Off	On	Off	Off	On	Off	121	On	Off	Off	On	On	On	On	Off	217	On	Off	Off	On	On	Off	On	On																		
30	Off	On	On	On	On	Off	Off	Off	76	Off	Off	On	On	Off	Off	On	Off	122	Off	On	Off	On	On	On	On	Off	218	Off	On	Off	On	On	Off	On	On																		
31	On	On	On	On	On	Off	Off	Off	77	On	Off	On	On	Off	Off	On	Off	123	On	On	Off	On	On	On	On	Off	219	On	On	Off	On	On	Off	On	On																		
32	Off	Off	Off	Off	Off	Off	Off	Off	78	Off	On	On	On	Off	Off	On	Off	124	Off	Off	On	On	On	On	On	Off	220	Off	Off	On	On	On	Off	On	On																		
33	On	Off	On	Off	Off	Off	On	Off	79	On	On	On	On	Off	Off	On	Off	125	On	Off	On	On	On	On	On	Off	221	On	Off	On	On	On	Off	On	On																		
34	Off	On	Off	Off	Off	On	Off	Off	80	Off	Off	Off	Off	On	Off	On	Off	126	Off	On	On	On	On	On	On	Off	222	Off	On	On	On	On	Off	On	On																		
35	On	On	Off	Off	Off	On	Off	Off	81	On	Off	Off	Off	On	Off	On	Off	127	On	On	On	On	On	On	On	Off	223	On	On	On	On	On	Off	On	On																		
36	Off	Off	On	Off	Off	On	Off	Off	82	Off	On	Off	Off	On	Off	On	Off	128	Off	Off	Off	Off	Off	Off	Off	On	224	Off	Off	Off	Off	Off	On	On	On																		
37	On	Off	On	Off	Off	On	Off	Off	83	On	On	Off	Off	On	Off	On	Off	129	On	Off	Off	Off	Off	Off	Off	On	225	On	Off	Off	Off	Off	On	On	On																		
38	Off	On	On	Off	Off	On	Off	Off	84	Off	Off	On	Off	On	Off	On	Off	130	Off	On	Off	Off	Off	Off	Off	On	226	Off	On	Off	Off	Off	On	On	On																		
39	On	On	On	Off	Off	On	Off	Off	85	On	Off	On	Off	On	Off	On	Off	131	On	On	Off	Off	Off	Off	Off	On	227	On	On	Off	Off	Off	On	On	On																		
40	Off	Off	Off	On	Off	On	Off	Off	86	Off	On	On	Off	On	Off	On	Off	132	Off	Off	On	Off	Off	Off	Off	On	228	Off	Off	On	Off	Off	On	On	On																		
41	On	Off	Off	On	Off	On	Off	Off	87	On	On	On	Off	On	Off	On	Off	133	On	Off	On	Off	Off	Off	Off	On	229	On	Off	On	Off	Off	On	On	On																		
42	Off	On	Off	On	Off	On	Off	Off	88	Off	Off	Off	On	On	Off	On	Off	134	Off	On	On	Off	Off	Off	Off	On	230	Off	On	On	Off	Off	On	On	On																		
43	On	On	Off	On	Off	On	Off	Off	89	On	Off	Off	On	On	Off	On	Off	135	On	On	On	Off	Off	Off	Off	On	231	On	On	On	Off	Off	On	On	On																		
44	Off	Off	On	On	Off	On	Off	Off	90	Off	On	Off	On	On	Off	On	Off	136	Off	Off	Off	On	Off	Off	Off	On	232	Off	Off	Off	On	Off	On	On	On																		
45	On	Off	On	On	Off	On	Off	Off	91	On	On	Off	On	On	Off	On	Off	137	On	Off	Off	On	Off	Off	Off	On	233	On	Off	Off	On	Off	On	On	On																		
46	Off	On	On	On	Off	On	Off	Off	92	Off	Off	On	On	On	Off	On	Off	138	Off	On	Off																																