

LIOB-153 I/O Module

Installation instructions

Instructions de montage







Montageanweisung



Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

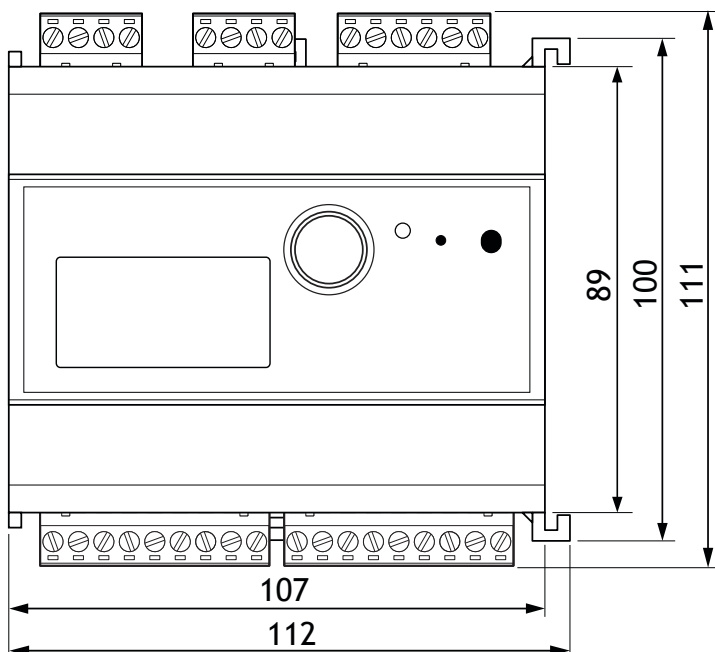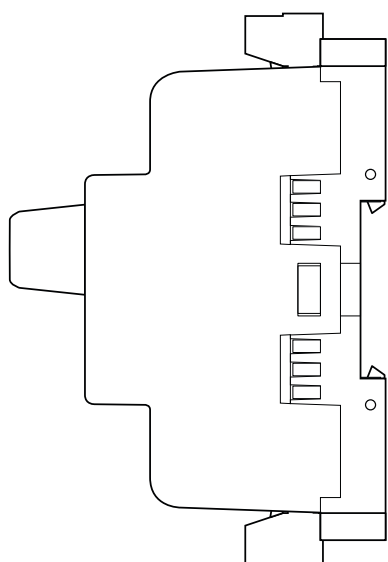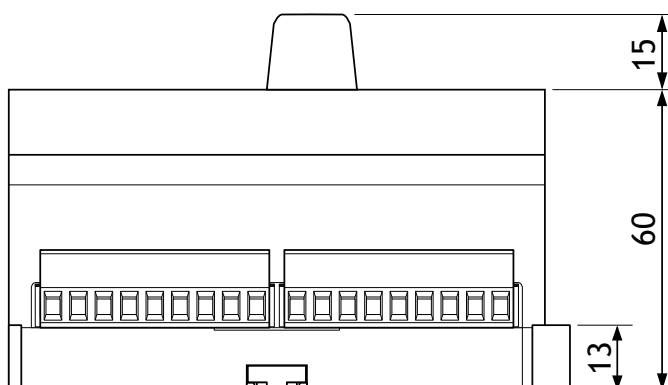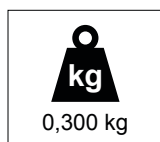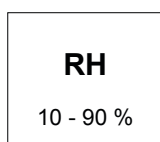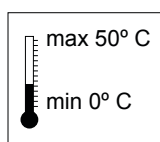

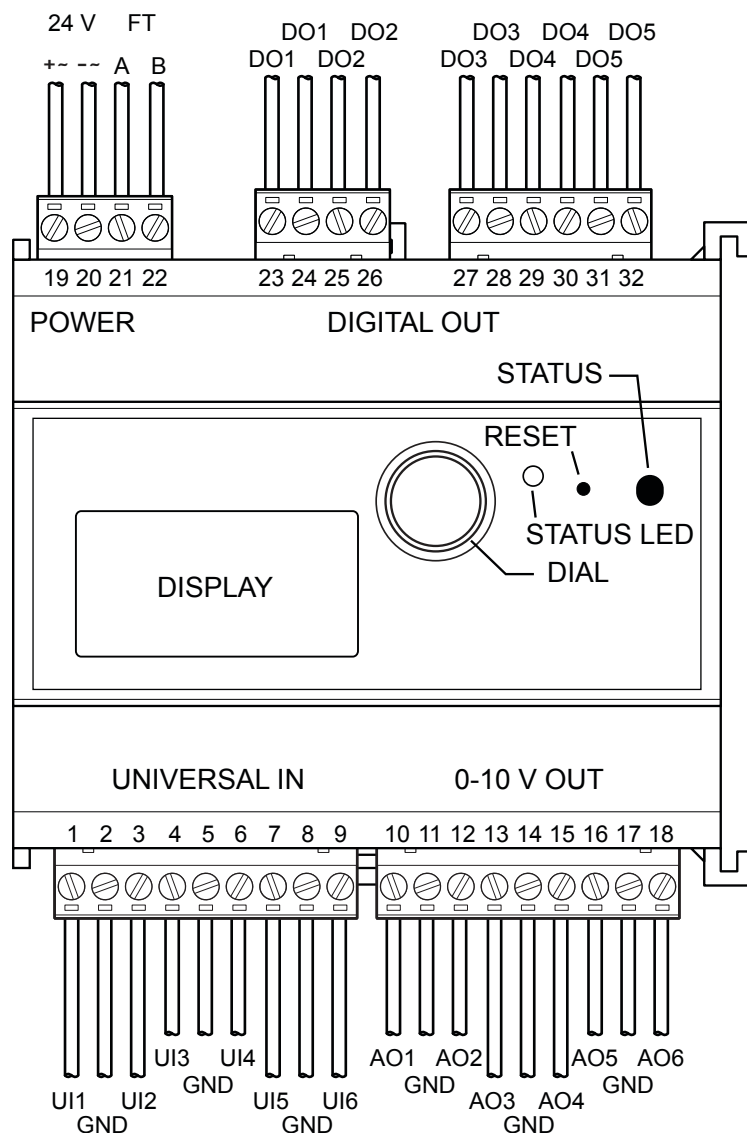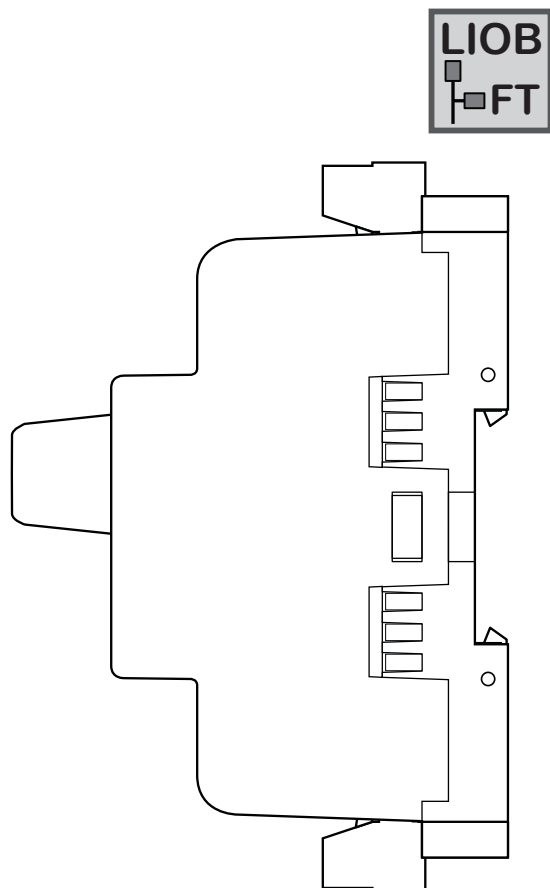

Buttons

STATUS	Status Button
RESET	Reset Button
DIAL	Turn-and-Push Dial

Connectors

UNIVERSAL INPUT	1	Input UI1
	2	Input GND
	3	Input UI2
	4	Input UI3
	5	Input GND
	6	Input UI4
	7	Input UI5
	8	Input GND
	9	Input UI6
ANALOG OUTPUT 0-10 V	10	Output AO1
	11	Output GND
	12	Output AO2
	13	Output AO3
	14	Output GND
	15	Output AO4
	16	Output AO5
	17	Output GND
	18	Output AO6

Connectors

POWER SUPPLY	19 20	Input 24 V PLUS or AC Input 24 V MINUS or AC  Do NOT ground Input 19 (+24V)
TP/FT-10 CEA-709	21 22	LIOB FT Input A LIOB FT Input B
DIGITAL OUTPUT RELAY 16A	23 24 25 26 27 28 29 30	Output DO1 Output DO1 Output DO2 Output DO2 Output DO3 Output DO3 Output DO4 Output DO4
DIGITAL OUTPUT RELAY 6A	31 32	Output DO5 Output DO5

Status LED		
STATUS	OFF	Unconfigured
	GREEN	LIOB-153 in operation
	ORANGE	LIOB-153 in manual / overwrite mode
	RED	Error
	FLASHING	Traffic

