

LIOB-453/483 I/O Module & I/O Controller

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

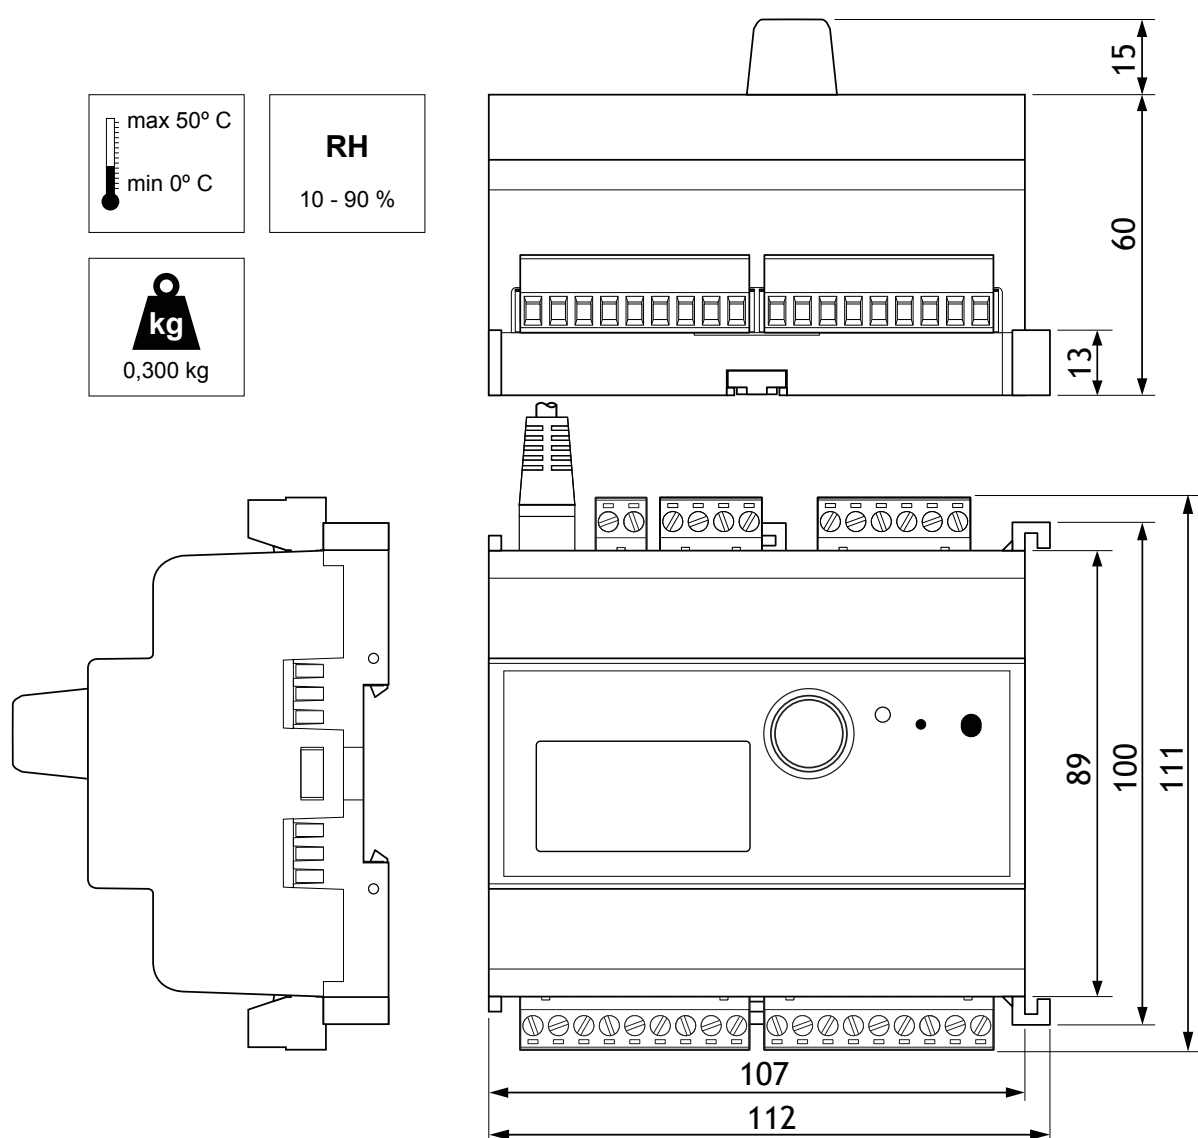

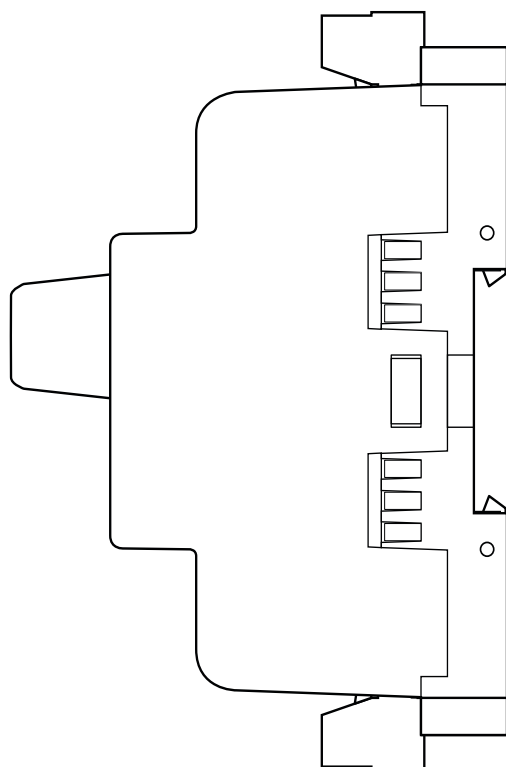


Buttons	
STATUS	Status Button
RESET	Reset Button
DIAL	Turn-and-Push Dial

Connectors		
UNIVERSAL INPUT	1	Input UI1
	2	Input GND
	3	Input UI2
	4	Input UI3
	5	Input GND
	6	Input UI4
	7	Input UI5
	8	Input GND
	9	Input UI6
ANALOG OUTPUT 0-10 V	10	Output AO1
	11	Output GND
	12	Output AO2
	13	Output AO3
	14	Output GND
	15	Output AO4
	16	Output AO5
	17	Output GND
	18	Output AO6

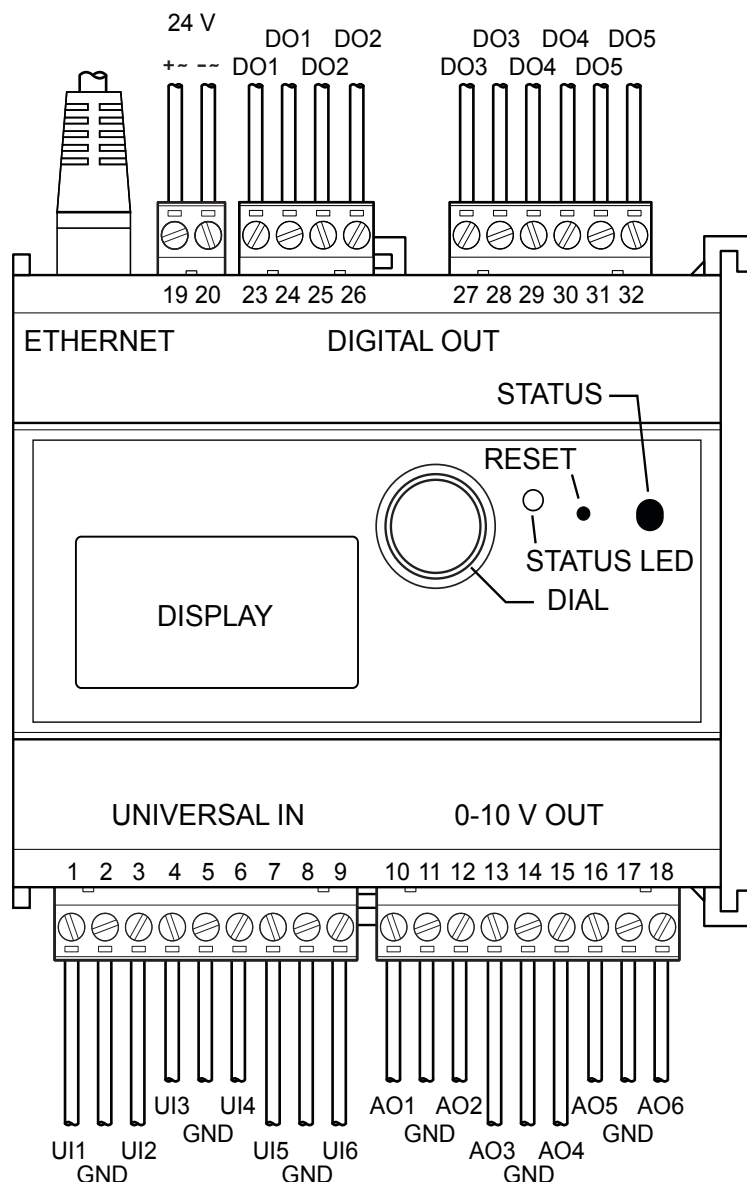


Connectors		
POWER SUPPLY	19	Input 24 V PLUS or AC
	20	Input 24 V MINUS or AC  Do NOT ground Input 19 (+24V)
DIGITAL OUTPUT RELAY 16A	23	Output DO1
	24	Output DO1
	25	Output DO2
	26	Output DO2
	27	Output DO3
	28	Output DO3
DIGITAL OUTPUT RELAY 6A	29	Output DO4
	30	Output DO4
	31	Output DO5
	32	Output DO5

Status LED		
STATUS	OFF	Unconfigured
	GREEN	LIOB-453 in operation
	ORANGE	LIOB-453 in manual / overwrite mode
	RED	Error
	FLASHING	Traffic

 

2 poles: Weidmüller BLZP 5.08/02/180
4 poles: Weidmüller BLZP 5.08/04/180
6 poles: Weidmüller BLZP 5.08/06/180
9 poles: Weidmüller BLZP 5.08/09/180

 0.2 - 2.5 mm²



35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

