PROGRAMMABLE/WIRELESS THERMOSTAT PRESTIGE IAQ



DESCRIPTION

The **Prestige** High Definition (HD) Color Touchscreen Thermostat provides control of 24 VAC of heating and cooling systems. RedLINK[™] enabled to work with compatible wireless accessories. These newly updated thermostats come in a variety of colors and can be accessed via the internet or through the mobile app available from Honeywell. The new Prestige is on the leading edge of design and remote access when it comes to thermostats for both residential and light commercial applications. Check out the entire line for one that fits your application.

FEATURES

- 60% smaller than Prestige 2.0 and available in 4 colors
- Delta T Alerts and Diagnostics inform customers when their system is not operating as expected
- · Residential or light commercial use
- User Interaction Log provides a searchable history of setting changes
- Assignable outputs for indoor air quality and staging control
- Selectable staging options
- Customizable service reminders
- Up to 4H/2C heat pump or 3H/2C conventional systems



Prestige IAQ-EIM



SPECIFICATIONS

Suppy Voltage 24 VAC

System Type 4 heat/2 cool heat pump and up to

3 heat/2 cool conventional

Sensor Type

Temperature Onboard 20kΩ NTC

Humidity Capacitive Communication RedLINK devices

Baud Rate 900 MHz frequency range

Analog Input EIM

2 Universal inputs, temperature or dry contact selectable (not available

with single- piece thermostat)

Output

EIM 7

Standalone 6 (USB on some models)

Contact Rating

EIM terminals W-O/B, Y, W3-Aux2, A-L/A

Maximum Current 1.0A,

EIM terminals G, U1, U2, U3

Maximum Current 0.5A

EIM terminals W2-Aux1, Y2

Maximum Current 0.6A

Temperature Sensor Accuracy

± 1.5° at 70°F (0.75° at 21°C)

Temperature Setting Range

Heating 40° to 90°F (4.5° to 32°C) Cooling 50° to 99°F (10° to 37°C)

Operating Temperature

Thermostat 32° to 120°F (0° to 48.9°C) EIM -40° to 165°F (-40° to 73.8°C)

Operating Humidity

Thermostat 5% to 90% condensing, EIM 5% to 95% non-condensing

Dimensions

EIM

Thermostat

Prestige IAQ 4-1/2"W x 3-1/2"H x 7/8"D

(11.5 x 8.9 x 2.2 cm)

Prestige 2.0 6-13/16"W x 3-7/8"H x 1-7/16"D

(17.3 x 9.9 x 3.6 cm) 9.34"H X 4.83"W X 1.6"D

(23.7 x 12.3 x 4.1 cm)

Measurement Range Building material and content

dependent

Weight 2.0 lb (maximum item)

Approvals This device complies with Part 15 of the FCC Rules. (15.19, 15.21,

15.105)

RoHS Statement Yes

Warranty 5 years (excludes batteries)

NEW!

March 2014

WE MAKE IT EASY.


kele.com | 888-397-5353 USA

PROGRAMMABLE/WIRELESS THERMOSTAT PRESTIGE IAO

WIRING - THX9321& THX9421


70°

Typical wiring of a 3-heat / 2-cool heat pump system with one transformer.

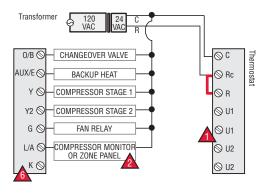


Prestige THX9321 and heat pump system with one transformer

Typical wiring of a 2-heat / 2-cool conventional system with one transformer.

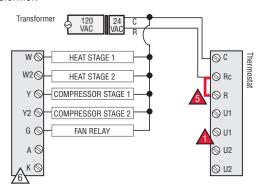


Prestige THX9321 and 2-heat / 2-cool conventional system with one transformer

Typical wiring of a 3-heat / 2-cool heat pump system with two transformers.

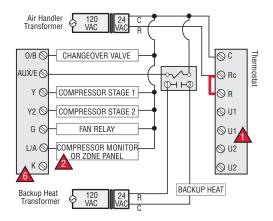

Prestige THX9321 and heat pump system with two transformers

Typical wiring for geothermal radiant heat, geothermal forced-air and backup heat with one transformer.

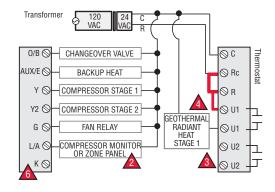

Prestige THX9321 and geothermal radiant heat, geothermal forced-air and backup heat with one transformer

- 1 U1 and U2 terminals are dry contacts.
- 2 L/A terminal sends continuous output when thermostat is set to EM HEAT mode except when set up for Economizer or TOD. See "Economizer Module Wiring Diagrams" beginning on page 151.
- 3 U1 or U2 terminals must be used for geothermal radiant heat (ISU 2010). Thermostat allows 2 stages of radiant heat—geothermal (stage 1) and boiler (stage 2).
- 4 "U" terminals are normally open dry contacts when set up for geothermal radiant heat. You must install a field jumper if radiant heat is powered by system transformer. Do NOT install a field jumper if radiant heat has its own transformer.
- 5 Remove jumper if using separate transformers.
- Connect the THP9045 Wiresaver Module to the K terminal in heating/cooling applications that do not have a common wire at the thermostat. The K terminal cannot be used in heat-only applications. See THP9045 installation instructions for more information.

NOTE: For additional set-up, wiring, and operation, see installation manual.


1306

PROGRAMMABLE/WIRELESS THERMOSTAT PRESTIGE IAQ




WIRING - EIM

Typical wiring of a heat pump system with up to 4-stage heat and 2-stage cool with one transformer

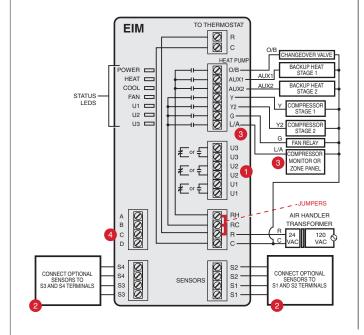

Typical wiring of a conventional system with up to 3-stage heat and 2-stage cool with one transformer

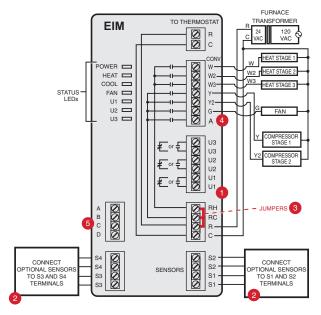

See installation instructions for additional wiring options.

NOTES

The RedLINK Internet Gateway requires a physical Ethernet connection to an open port on a user-supplied router. The router must be connected to the internet via a user's Internet Provider for access to the Honeywell server. There is no need for a static IP address. To date, there have been no reported issues with port blocking or firewalls preventing access.


In order to guard against possible wireless signal overload, assure that all wireless RedLINK devices including the RedLINK Internet Gateway are spaced a minimum of 2 feet apart from each other for proper operation.

REDLINK WIRELESS GATEWAY (THM6000R1002) CONTRACTOR SETUP

- 1. Connect power to the RedLINK Internet Gateway using the supplied 120VAC power supply wall module.
- 2. Connect the supplied Ethernet cable from the RedLINK Internet Gateway to an available port on a designated Router (router supplied by others).
- 3. Using the Prestige Thermostat Contractor Installation Options Menu select Wireless Device Manager, then select Add Device.
- 4. Press and release the Connect button located on the bottom of the RedLINK Internet Gateway. The device will appear on the Thermostat. Exit the menu.
- 5. Note the Device MAC ID and Device CRC information on the bottom of the device (required for account assignment).

NEW!

PROGRAMMABLE/WIRELESS THERMOSTAT PRESTIGE IAQ

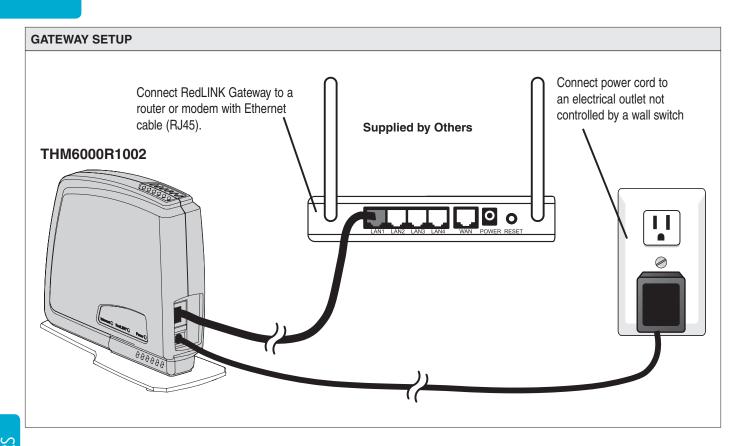

ACCOUNT SETUP

- 1. Visit www.mytotalconnectcomfort.com and click "Create an Account." There is no charge for this service.
- 2. Enter required account information including email, password and security questions/answers.
- 3. Account verification email will be sent to account email log into email and validate account to return to www.mytotalconnectcomfort.com
- 4. Enter New Location for RedLINK Internet Gateway including location type (commercial or residential) and alert email accounts
- 5. Assign RedLINK Internet Gateway to location by entering the unique device MAC ID and device CRC information (Found on bottom of THM6000R1002)

Account is now active and may be accessed via any supported web browser or smart phone application.

1308

PROGRAMMABLE/WIRELESS THERMOSTAT PRESTIGE IAQ



ORDERING INFORMATION

Kit	Included in Kit	
Part Number	Part Number	Description
Prestige IAQ Kit YTHX9421R5101WW	THX9421R5021WW	Thermostat - White Front, White Side
	THM5421R1021	Equipment Interface Module
	C7089R1013	Wireless Outdoor Sensor
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5101BB	THX9421R5021BB	Thermostat - Black Front, Black Side
	THM5421R1021	Equipment Interface Module
	C7089R1013	Wireless Outdoor Sensor
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5101SG	THX9421R5021SG	Thermostat - Silver Front, Gray Side
	THM5421R1021	Equipment Interface Module
	C7089R1013	Wireless Outdoor Sensor
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5101WG	THX9421R5021WG	Thermostat - White Front, Gray Side
	THM5421R1021	Equipment Interface Module
	C7089R1013	Wireless Outdoor Sensor
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5085WW	THX9421R5021WW	Thermostat - White Front, White Side
	THM5421R1021	Equipment Interface Module
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5085BB	THX9421R5021BB	Thermostat - Black Front, Black Side
	THM5421R1021	Equipment Interface Module
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5085SG	THX9421R5021SG	Thermostat - Silver Front, Gray Side
	THM5421R1021	Equipment Interface Module
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige IAQ Kit YTHX9421R5085WG	THX9421R5021WG	Thermostat - White Front, Gray Side
	THM5421R1021	Equipment Interface Module
	50062329-001	Discharge/Return Sensors (Qty. 2)
Prestige 2.0 Kit YTHX9321R5061	THX9321R5030	Thermostat
	REM5000R1001	Portable Comfort Control
Prestige 2.0 Kit YTHX9321R5079	THX9321R5030	Thermostat
	C7089R1013	Wireless Outdoor Sensor

NEW!