



INTRODUCTION

The room RH transmitter uses a highly accurate and field-proven RH sensor in an attractive, low profile enclosure to monitor room relative humidity levels. Additional options include an occupancy override button, a communication jack, a fan speed switch, a slide-pot setpoint control, a resistive temperature sensor and a LED or LCD display. The RH output can be selected as a linear 4-20 mA, 0-5 or 0-10 Vdc signal.

BEFORE INSTALLATION

Read these instructions carefully before installing and commissioning the device. Failure to follow these instructions may result in product damage. Do not use in an explosive or hazardous environment, with combustible or flammable gases, as a safety or emergency stop device or in any other application where

failure of the product could result in personal injury. **Take electrostatic discharge precautions during installation and do not exceed the device ratings.**

MOUNTING

The room RH transmitter installs directly on a standard electrical box and should be mounted five feet from the floor of the area to be controlled. Do not mount the sensor near doors, opening windows, supply air diffusers or other known air disturbances. Avoid areas where the detector is exposed to vibrations or rapid temperature changes.






The cover is hooked to the base at the top edge and must be removed from the bottom edge first. Use a small Phillips screwdriver to loosen the security screw as shown in Figure 1. (Complete removal of this screw is not required). Use the screwdriver to carefully pry each bottom corner if necessary. Tip the cover away from the base and sit it aside as shown in Figure 2.

The PCB must be removed from the base to access the mounting holes. Follow usual anti-static procedures when handling the PCB and be careful not to touch the sensors. The PCB is removed by pressing the enclosure base to unsnap the latch near the bottom edge, then the PCB can be lifted out of the base as shown in Figure 3.

Sit the PCB aside until the base is mounted on the wall. For added protection, place the PCB in the supplied anti-static bag.

Mount the base by screwing to an electrical box or directly to the wall as shown in Figure 4. The mounting hole locations are shown on page 3.

After the base is screwed to an electrical box or the wall using the appropriate holes, remove the PCB from the anti-static bag, feed connection wires through center hole and place the top of PCB into the PCB holders on backplate and snap bottom of PCB into place as shown in Figure 4.

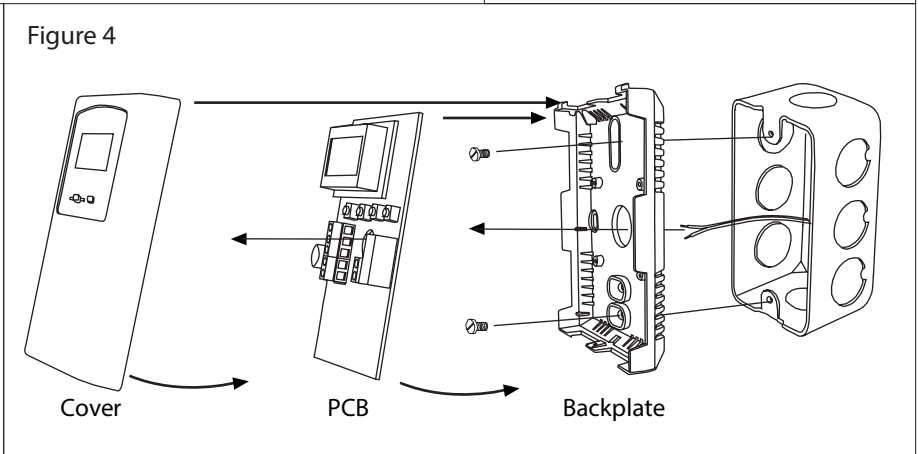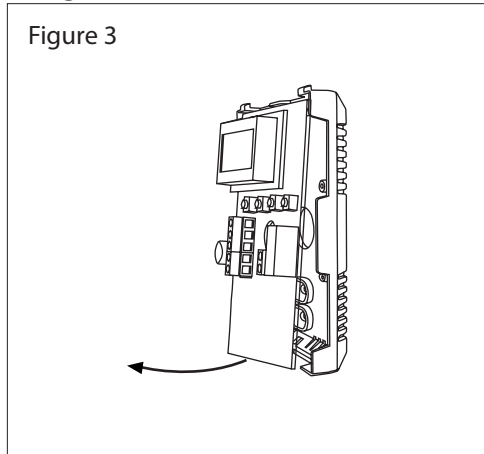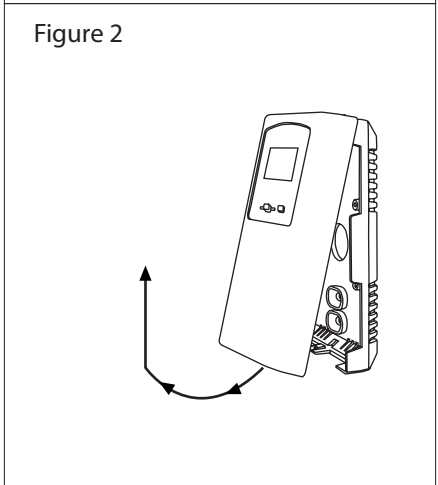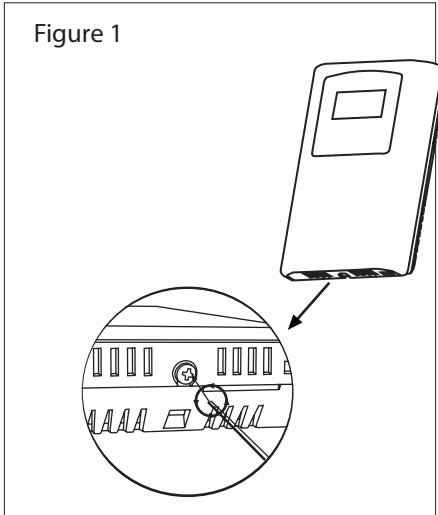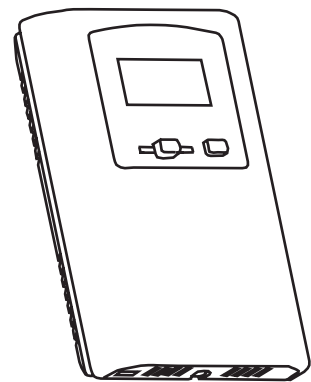

Make wire connections as per the Wiring Illustrations on Page 2 and install decorative cover by placing the top of the cover into the cover holder on the top of the backplate and snapping the bottom into place as shown in Figure 4. Tighten security screw with a Phillips screwdriver.



WIRING

Deactivate the 24 Vac/dc power supply until all connections are made to the device to prevent electrical shock or equipment damage. Follow proper electrostatic discharge (ESD) handling procedures when installing the device or equipment damage may occur.

Use 22 AWG shielded wiring for all connections and do not locate the device wires in the same conduit with wiring used to supply inductive loads such as motors. Connect the cable shield to ground at the controller only. Make all connections in accordance with national and local codes.

Connector layout is shown in Figure 5. Diagram shown includes all options. If option is not ordered, connector will not be present.




For 4-20 mA two-wire loop-powered operation, only the POWER and OUTPUT terminals are required if a DC power supply is used.

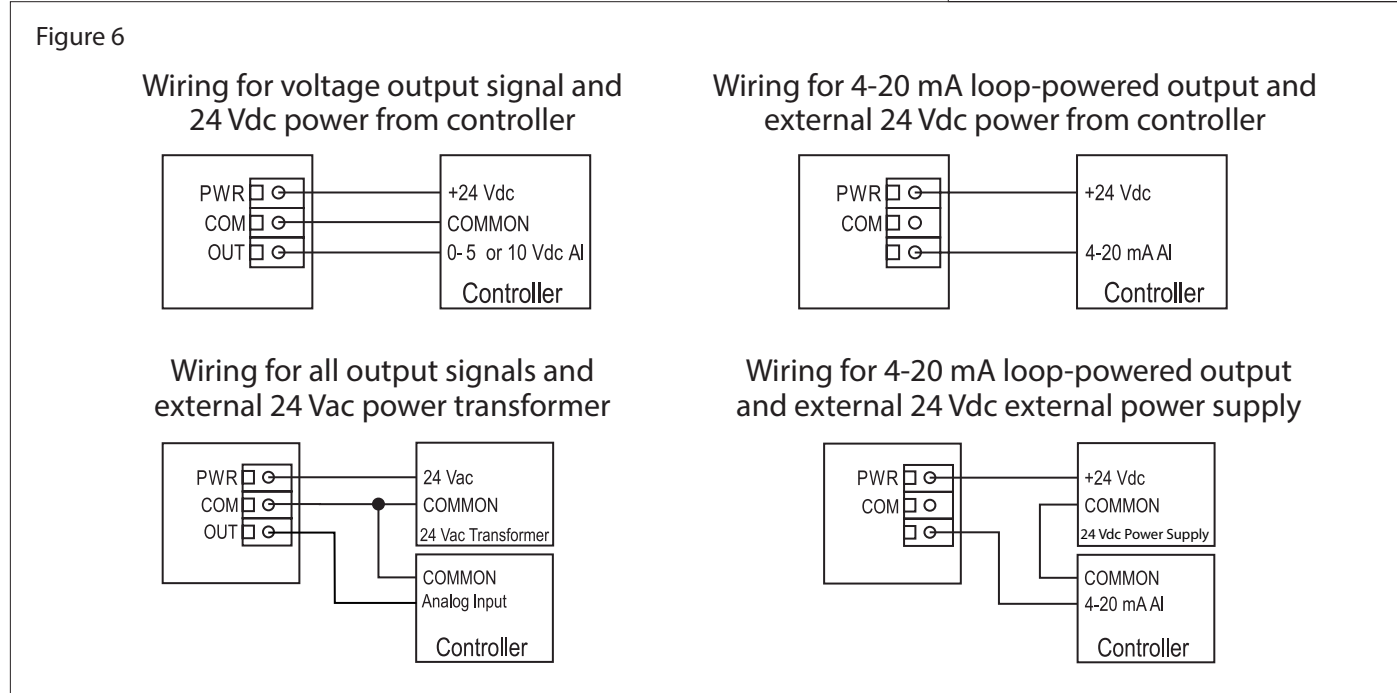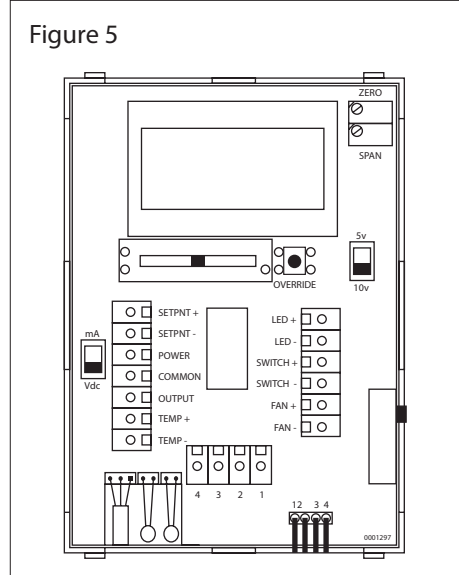

The COMMON terminal is only used for AC power or for a voltage output signal type. If the signal type is set to voltage, or a 24 volt AC power supply is used, connect the positive dc voltage or the hot side of the ac voltage to the terminal marked POWER and the power supply common is connected to the terminal marked COMMON. The device is reverse voltage protected and will not operate if connected backwards.

For three-wire voltage output operation, connect either an AC or DC power supply to POWER and COMMON and the voltage output signal is available on the OUTPUT terminal with respect to COMMON as shown in Figure 6.

Ensure the controller Analog Input (AI) matches the transmitter output signal type before power is applied and that the pcb switches are set correctly for the required signal type. The current signal has a maximum load that it will drive and the voltage signal has a minimum load rating. Follow the ratings in the Specification section or inaccurate readings may result.

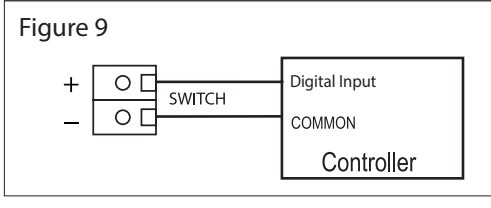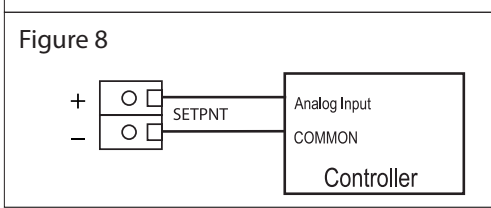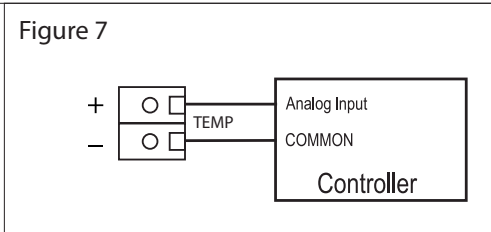

This device has a half-wave power supply so the power supply common is the same as the signal common. Several devices may be connected to one power supply and the output signals all share the same common. Use caution when grounding the secondary of a transformer or when wiring multiple devices to ensure the ground point is the same on all devices and the controller.

The following optional features are only included if ordered. Wiring terminals are only present for features ordered.

An optional resistive temperature sensor may also be included in the device and is connected to the TEMP terminals as shown in Figure 7.

An optional resistive slide-pot setpoint output signal is available on the SETPNT + and SETPNT – terminals and can be configured with various resistance values and the operation can be set for forward or reverse acting as shown in Figure 8.

An optional override switch output is a dry-contact and is available

Figure 10

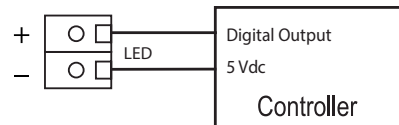


Figure 11



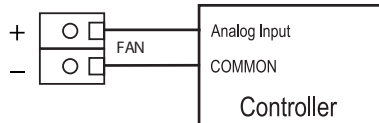


Figure 12

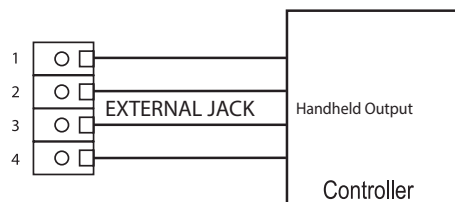

on the SWITCH + and SWITCH – terminals and typically connects to a low voltage digital input of the controller to indicate room occupancy or override when the button is activated as shown in Figure 9.

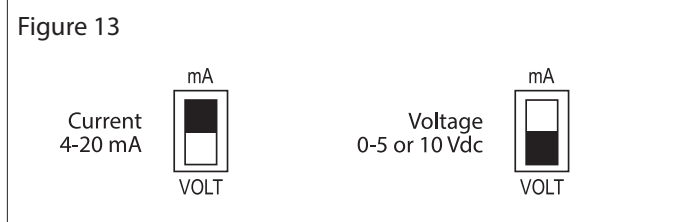

on the SWITCH + and SWITCH – terminals and typically connects to a low voltage digital input of the controller to indicate room occupancy or override when the button is activated as shown in Figure 9.

An optional LED input is typically powered by a 5 Vdc digital output from the controller and connects to the LED + and LED - terminals as shown in Figure 10.

An optional five position fan speed output signal is configured with five different resistive values and is available on the FAN + and FAN – terminals as shown in Figure 11.

An optional external jack is internally connected to a four-pin terminal block labeled 1, 2, 3 and 4 and accepts a four-pin header connector for remote communication with the controller as shown in Figure 12.


START-UP

Verify that the transmitter is properly wired, connections are tight and the mA / Vdc switch is in the correct position as shown in Figure 13. For voltage output, also ensure the 5V / 10V switch is set correctly for the required signal type as shown in Figure 14. Apply power and note that the LCD will begin displaying the RH level (if installed). The output signal will also be available immediately after start-up.

OUTPUT SIGNAL

The RH output is scaled such that 4-20 mA (or 0-5 or 0-10 Vdc) equals 0-100 %RH and is temperature compensated over the full 0-50 °C temperature range.

DIMENSIONS

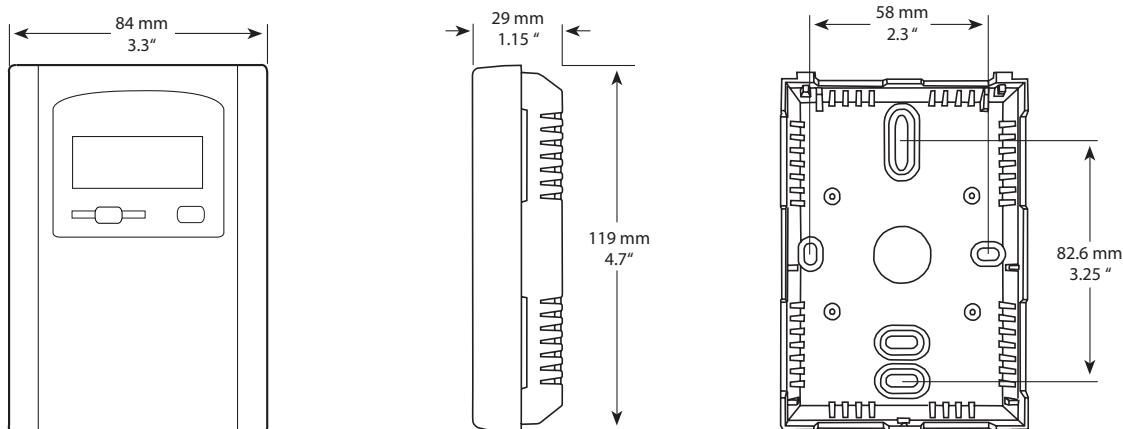

SPECIFICATIONS

Sensor	Thermoset polymer based capacitive
Accuracy	±2, 3 or 5% RH from 5 to 95% RH
Range.....	0 to 100% RH non-condensing
Hysteresis	± 3% RH
Reponse Time	15 seconds typical
Stability	±1.2% RH typical @ 50% RH in 5 years
Power Supply	24 Vac/dc ±10% (non-isolated half-wave rectified)
Consumption @ 24 Vdc	20 mA
Input Voltage Effect	Negligible over specified operating range
Output Signal.....	4-20 mA current loop, 0-5 Vdc or 0-10 Vdc - Jumper selectable
Output Drive @ 24 Vdc	Current: 550 ohm max. Voltage: 10K ohms min.
Output Resolution	10 bit PWM
Internal Adjustments	ZERO and SPAN pots
Protection Circuitry.....	Reverse voltage protected, overvoltage protected
Operating Conditions	0 to 50°C (32 to 122°F), 0 to 95 %RH non-condensing
Enclosure Dimensions	84mm W x 117mm H x 29mm D (3.3" x 4.6" x 1.15")
Enclosure Material.....	White ABS, IP30 (NEMA 1)
Weight	5.3 oz (150 gm)
Country of Origin.....	Canada

LCD DISPLAY

Range.....	00.0 to 99.9 %RH, 3 digit
Display Size	38.1 mm x 16.5 mm (1.5" x 0.65")
Digit Height	11.43 mm (0.45")
Symbol	% RH

TEMPERATURE

Sensor	Various Thermistors and RTD's
--------------	-------------------------------

SETPOINT SLIDE POT

Range.....	Front panel pot, two wire resistive output, 0-10K Ω
Custom spans available.....	1K, 2K, 5K, 10K or 20K Ω

OVERRIDE

Type.....	Front panel, momentary push-button, 2 wire dry contact
Switch ratings	N.O., SPST, 50 mA @12 Vdc

LED INPUT

Signal Type.....	5 V current limited, 2-wire standard
Color.....	Yellow, Red or Green
Power Supply	5 Vdc standard, 10 or 24 Vdc optional

NETWORK COMMUNICATIONS

Type.....	4-pin header connector to 4-pin terminal block Requires HHTA - Hand Held Adapter
-----------	---

FAN SPEED SWITCH

Type.....	Side mounted, 5 position slide switch
Range.....	Off, Auto, Low, Medium, High
Signal	2 wire resistance output : 0, 2, 4, 6, 8K Ω (Custom ranges available)