

HOLD-DOWN SPRING & FITTINGS (OPTIONAL)


**Hold down spring does not come included with socket.
Must be ordered separately.**

Hold-down spring can be used to secure relay to socket when vibration becomes a factor.

Instructions: 1. Insert fittings into slots, as shown in diagram, with the lip facing inside part of socket. 2. Place the ends of the hold-down spring into the hole of each fitting.

(Applied socket type:
SR3P-05
& SR2P-05)

(insert the fitting
with its back facing
outside.)

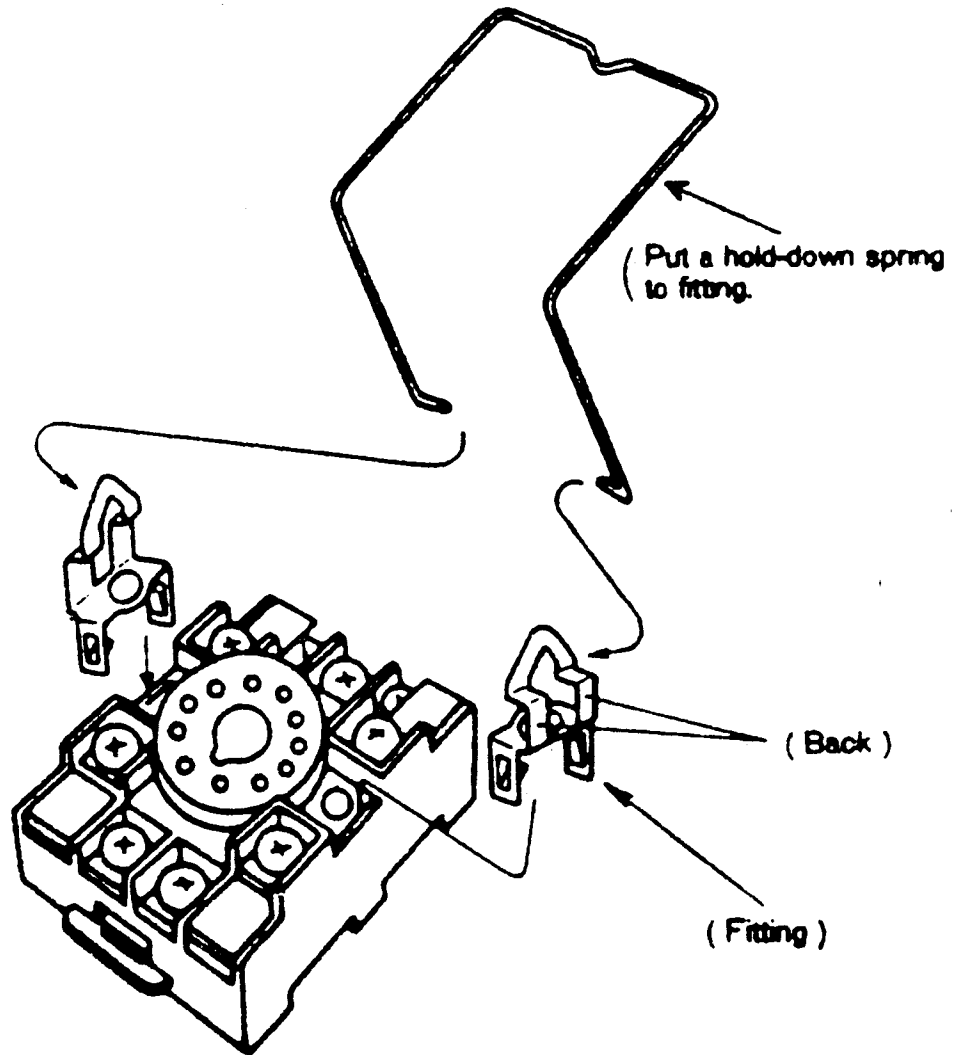

Caution: 1. Once inserted, fittings cannot be removed.

idec

IDEC CORPORATION