



# OPERATION & SAFETY INSTRUCTIONS

## HAZLOC VORTEX A/C

Models VHL09160, VHL15160, VHL25160



### IMPORTANT

**Please read all instructions BEFORE attempting to use this product**

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D; Class II, Division 2, Groups F and G; Class III OR non-hazardous locations only.

### Pentair Equipment Protection

2100 Hoffman Way  
 Minneapolis, MN 55303 USA  
 1.763.422.2211  
 hoffmanonline.com

## SIZING THE SPARK ARRESTOR VENT TO THE HAZLOC VORTEX A/C

As stated in the introduction, the HazLoc Vortex A/C must be used in conjunction with an enclosure purge and pressurization system. The purge system must have a spark arrestor vent that allows the cold air flow (produced by the HazLoc Vortex A/C) and the pressurization air flow to safely escape the protected enclosure, without creating too little or too much pressure in the enclosure. Add the pressurization air flow to the cold air flow as found in the table below to determine the total air flow through the spark arrestor vent.

| HazLoc Vortex A/C Cold Air Flow (at 90 to 100 psig (6-7 bar) operating pressure) |  |
|--|--|
| Models   | Cold Air Flow                                    |
| VHL09160   | 7 ft <sup>3</sup> /minute (198 liters/minute)    |
| VHL15160   | 14 ft <sup>3</sup> /minute (396 liters/minute)   |
| VHL25160   | 23.5 ft <sup>3</sup> /minute (665 liters/minute) |

Contact the purge system manufacturer or Hoffman if assistance is needed in selecting the correct spark arrestor vent to allow proper purging and pressurization.

## OPERATION

It is recommended to operate the HazLoc Vortex A/C at 90 to 100 psig (6-7 bar) compressed air pressure. If compressed air pressure exceeds 100 psig (7 bar), regulate the pressure down to 90 to 100 psig (6-7 bar). Operation at pressures less than 90 psig (6 bar) and above 100 psig (7 bar) can affect the temperature points at which the unit cycles. When operated at the recommended pressure, the HazLoc Vortex A/C will cycle on and off to maintain temperatures between approximately 80 to 90° F (27 to 32°C). When the HazLoc Vortex A/C is not cooling, the Check Valve closes shutting off the air passage from the enclosure interior to the exterior and allowing the purge/pressurization system to maintain slight pressure in the enclosure. Do not apply excessive heat or a flame to the mechanical thermostat to "test" it for operation. Damage to the product may result that is not covered under the warranty.

## ELEVATED SURFACE TEMPERATURES

Because the HazLoc Vortex A/C operates using the vortex principle, hot exhaust air is generated and released at low pressure from the opening in the stainless steel shroud on the back of the unit. This exhaust air can reach temperatures up to 225°F (107°C) under normal conditions. (Normal conditions are compressed air inlet pressure of 90 to 100 psig (6-7 bar) and compressed air inlet temperature of 70°F (21°C)). The HazLoc Vortex A/C models can be operated at compressed air temperatures that do not exceed 120°F (49°C). The HazLoc Vortex A/C models have a Temperature Class of T4.

## TROUBLESHOOTING

Insufficient cooling may be caused by the following:

1. Undersized compressed air line size.
2. Compressed air pressure at the product is too low.
3. Partial or complete blockage of internal compressed air path, due to dirt.
4. Water vapor in the compressed air supply.
5. Loose cold air outlet fitting. This may occur if not tightened properly after being disassembled for cleaning.

If trouble persists, please contact Pentair Equipment Protection for assistance, phone #763.422.2211.

## TABLE 1: FILTER RECOMMENDATIONS

| FILTER AND REPLACEMENT PART ITEM NUMBERS |                    |                                   |
|--|--------------------|-----------------------------------|
| Hoffman Model                            | Oil Removal Filter | Replacement Generator Kits (5 pc) |
| VHL09160                                 | VC-OF17            | VAGK09                            |
| VHL15160                                 | VC-OF17            | VAGK15                            |
| VHL25160                                 | VC-OF25            | VAGK25                            |

## TABLE 2: DETERMINING COMPRESSED AIR LINE SIZE

1. Calculate total product compressed air consumption (SCFM, SLPM).
2. Determine length of compressed air line required for connection to main supply.
3. Locate pipe length in left column and read to the right to find the compressed air requirements.
4. Locate pipe size at top of column.

| MAXIMUM AIRFLOW (SCFM) THROUGH PIPE AT 5 PSIG PRESSURE DROP (100 PSIG AND 70°F) |                                   |     |     |     |     |       |       |      |       |
|---|-----------------------------------|-----|-----|-----|-----|-------|-------|------|-------|
| Pipe Length (Feet)  | Pipe Size (Nominal) - Schedule 40 |     |     |     |     |       |       |      |       |
|   | 1/4                               | 3/8 | 1/2 | 3/4 | 1   | 1-1/4 | 1-1/2 | 2    | 2-1/2 |
| 10  | 29                                | 65  | 120 | 254 | 480 | 978   | 1483  | 2863 | 4536  |
| 20  | 21                                | 46  | 85  | 180 | 340 | 692   | 1049  | 2024 | 3208  |
| 30  | 17                                | 37  | 70  | 147 | 277 | 565   | 856   | 1653 | 2619  |
| 40  | 15                                | 32  | 60  | 127 | 240 | 489   | 792   | 1431 | 2268  |
| 50  | 13                                | 29  | 54  | 114 | 215 | 437   | 663   | 1280 | 2029  |
| 60  | 12                                | 26  | 49  | 104 | 196 | 399   | 606   | 1169 | 1852  |
| 70  | 11                                | 25  | 46  | 96  | 181 | 370   | 561   | 1082 | 1715  |
| 80  | 10                                | 23  | 43  | 90  | 170 | 346   | 524   | 1012 | 1604  |
| 90  | 10                                | 22  | 40  | 85  | 160 | 326   | 494   | 954  | 1512  |
| 100   | 9                                 | 21  | 38  | 80  | 152 | 309   | 469   | 905  | 1435  |

| MAXIMUM AIRFLOW (SLPM) THROUGH PIPE AT 0.3 BAR PRESSURE DROP (6.9 BAR AND 21°C) |                                   |      |      |      |       |       |       |       |        |
|---|-----------------------------------|------|------|------|-------|-------|-------|-------|--------|
| Pipe Length (Meters)  | Pipe Size (Nominal) - Schedule 40 |      |      |      |       |       |       |       |        |
|   | 1/4                               | 3/8  | 1/2  | 3/4  | 1     | 1-1/4 | 1-1/2 | 2     | 2-1/2  |
| 3   | 821                               | 1840 | 3396 | 7188 | 13584 | 27677 | 42117 | 81023 | 128369 |
| 6   | 594                               | 1302 | 2406 | 5094 | 9622  | 19584 | 29687 | 57279 | 90786  |
| 9   | 481                               | 1047 | 1981 | 4160 | 7839  | 15990 | 24225 | 46780 | 74188  |
| 12  | 425                               | 906  | 1698 | 3594 | 6792  | 13839 | 20999 | 40497 | 64184  |
| 15  | 368                               | 821  | 1528 | 3226 | 6085  | 12367 | 18763 | 36224 | 57421  |
| 18  | 340                               | 736  | 1387 | 2943 | 5547  | 11292 | 17150 | 33083 | 52412  |
| 21  | 311                               | 708  | 1302 | 2717 | 5122  | 10471 | 15877 | 30621 | 48535  |
| 24  | 283                               | 651  | 1217 | 2547 | 4811  | 9792  | 14829 | 28640 | 45393  |
| 27  | 269                               | 623  | 1132 | 2406 | 4528  | 9226  | 13980 | 26998 | 42790  |
| 31  | 255                               | 594  | 1075 | 2264 | 4302  | 8745  | 13273 | 25612 | 40611  |

Rubber hose maximum airflow rating: 1/2" I.D. rubber hose = 3/8" pipe; 3/4" I.D. rubber hose = 1/2" pipe

## LIMITED WARRANTY

Pentair Equipment Protection products will be replaced or repaired if found to be defective due to manufacture within one year from the date of invoice. Pentair makes no specific warranty of merchantability or warrant of fitness for a particular purpose.

## GENERAL SAFETY CONSIDERATIONS

### **DANGER: COMPRESSED AIR COULD CAUSE DEATH, BLINDNESS OR INJURY.**

1. Do not operate a HazLoc Vortex A/C at compressed air pressures above 100 psig (7 bar).
2. Do not operate at compressed air temperatures above 120°F (49°C).
3. Avoid direct contact with compressed air.
4. Do not direct compressed air at any person.
5. When using compressed air, wear safety glasses with side shields.

**WARNING!** Explosion Hazard: Substitution of components may impair suitability for Class I Division 2.

## INTRODUCTION

The Hazardous Location Vortex A/C (“HazLoc Vortex A/C”) is designed to cool industrial control cabinets located in hazardous locations, using only filtered and dried compressed air to generate the cooling. The HazLoc Vortex A/C shall only be used in conjunction with a properly sized enclosure purge and pressurization system that must be able to vent the additional air introduced by the HazLoc Vortex A/C. (The purge and pressurization system must be selected and supplied by the end user.)

The cooling air produced by the HazLoc Vortex A/C in the enclosure is vented into the hazardous area (outside of the enclosure) through the purge system’s spark arrestor vent. The spark arrestor vent must be properly sized to accept the additional cold air flow generated by the HazLoc Vortex A/C to prevent over-pressurization of the enclosure.

It is the end user’s responsibility to ensure that the correct spark arrestor vent is used and that the purge system functions properly when integrated with the HazLoc Vortex A/C.

DO NOT operate the HazLoc Vortex A/C on a sealed and unvented enclosure as pressure in the enclosure will increase and damage or injury could result. The HazLoc Vortex A/C has a built in mechanical thermostat that requires no electricity. The thermostat cycles on and off to maintain an 80 to 90°F (27 to 32°C) enclosure temperature range.

## COMPRESSED AIR SUPPLY

The compressed air system’s intake must originate in a non-hazardous area. Compressed air piping must be fabricated from noncombustible materials suitable for the conditions present. The pressurized air supply provided to the HazLoc Vortex A/C must be of the same quality as that used to purge and pressurize the enclosure it is installed on.

The compressed air supply must be filtered (5 micron maximum) to remove water and dirt. The 5 micron filter is supplied for this purpose (Hoffman model VAAF15 or VAAF25). If oil is present in the compressed air supply, remove the oil using an optional 0.01 micron coalescing filter (Hoffman model VC-OF17 or VC-OF25). If an oil removal filter is necessary, install it downstream of the 5 micron filter. Locate the filters in a non-hazardous location to facilitate easy filter element changes. Change the filter elements as needed (see Maintenance).

It is highly recommended to dry the compressed air (to remove water vapor) using a refrigerated air dryer. Failure to dry the air adequately may result in frost or ice forming internally and resulting in decreased cooling air flow and cooling capacity.

Supply compressed air to the HazLoc Vortex A/C with 3/8” schedule 40 pipe when the pipe length is less than 30 feet (9m). If pipe length exceeds 30 feet (9m), use ½” pipe or contact your local authorized distributor or Pentair Equipment Protection for assistance.

## MAINTENANCE

The only maintenance involved with the HazLoc Vortex A/C is normal element changes to the compressed air filter. The filter element should be changed when there is a decrease in performance or when pressure drop across the filter exceeds 5 psig (0.3 bar).

The compressed air supply to the unit must be shut off before changing the filter element. The compressed air filter should be located in a nonhazardous area so that normal filter element maintenance can be carried out without risk of hazardous substances entering the enclosure. If the compressed air filter must be located in the hazardous area, electric power to the enclosure must be shut off while performing filter maintenance and then routine purge system startup procedures should be followed when filter maintenance is complete and before power is applied to the enclosure.

The HazLoc Vortex A/C has only two moving parts (the mechanical thermostat/valve and the check valve) which are not serviceable in the field. Do not disturb the setting of the thermostat. Evidence of tampering with the thermostat may void the warranty.


If it is suspected that the compressed air filter has not been maintained after an extended period of operation, there may be pipe scale or foreign material in the HazLoc Vortex A/C. If the unit is not cooling sufficiently, there may be pipe scale or foreign material in the orifices of the “generator” in the unit.

1. To check, shut off all electric power to the protected enclosure and follow any purge system shutdown procedures. Shut off the compressed air supply to the HazLoc Vortex A/C. Before opening the enclosure door, allow sufficient time for any internal components to cool down completely.
2. Detach the 5/8” (16mm) ID vinyl tubing from the check valve assembly and remove the check valve assembly from the cold air outlet fitting of the HazLoc Vortex A/C.
3. Remove the brass cold air outlet fitting from the bottom of the unit (with a 1” (25mm) open end wrench).
4. Remove the O-Ring. Then remove the red (model VHL09160), or the blue (model VHL15160) or the brown (model VHL25160) generator.
5. Inspect the six slots in the generator for foreign material and clean if necessary.
6. Clean the cavity in the HazLoc Vortex A/C that the generator was located in if necessary.
7. Reassemble the generator, O-Ring and cold air outlet fitting in reverse order. Tighten the cold outlet fitting to at least 100 inch pounds (11 newton meters) torque.
8. Attach the check valve assembly to the cold outlet fitting making sure the air flow through the check valve is in the proper direction. Tighten all pipe connections securely. Reattach the 5/8” (16mm) vinyl tubing to the check valve outlet. Open the compressed air supply valve(s) to the HazLoc Vortex A/C. Follow purge system startup procedures before applying electric power to the enclosure.

## INSTALLATION

1. The HazLoc Vortex A/C must be installed on the top of the enclosure on a flat horizontal surface of the enclosure. Alternately, the HazLoc Vortex A/C can be mounted on the side of the enclosure. When the unit is side mounted (on a flat vertical surface of the enclosure), the compressed air inlet must be pointing up, or, the stainless steel shroud must face down toward the floor. If side mounted, it is best if the unit is located near the top of the enclosure.
2. Find a location for the HazLoc Vortex A/C on your enclosure so that there is sufficient clearance for the internal mechanical thermostat and cold air outlet and check valve assembly, and, so that the entire mounting “footprint” of the HazLoc Vortex A/C is supported by the enclosure. (A 4 ¾” wide x 3 ½” (121mm x 89mm) area.) Position the unit so that the stainless steel shroud on the back of the unit is away from personnel, if possible. Also, position so that no internal enclosure components obstruct air flow around the mechanical thermostat. The HazLoc Vortex A/C should be located adjacent to the purge system’s spark arrestor vent. This will allow the mechanical thermostat to sense temperature of the airflow exiting the vent and respond faster to the temperature changes in the enclosure.
3. Cut a 1-15/16” (49mm) diameter hole (1-½” knockout size) in the selected location of the flat horizontal (or vertical) surface of the enclosure. De-burr any sharp edges around this hole.
4. Remove the 1 ½” electrical locknut from the HazLoc Vortex A/C. Insert the threaded portion of the HazLoc Vortex A/C into the 1 15/16” (49mm) hole in the enclosure. (Be careful not to damage the mechanical thermostat during installation.)
5. From inside the enclosure, screw the 1 ½” electrical locknut onto the threads of the HazLoc Vortex A/C. Tighten the locknut securely to compress the 1/8” (3mm) thick sealing gasket that is located between the enclosure surface and the HazLoc Vortex A/C.
6. Attach the Check Valve assembly to the cold air outlet of the HazLoc Vortex A/C (a 3/8”-18 npt thread) inside the enclosure. The Check Valve can be attached to the HazLoc Vortex A/C with the supplied 3/8” npt straight pipe nipple OR with the supplied 3/8” npt pipe elbow. The orientation of the Check Valve assembly is not important, it will function in any position, however, the airflow direction through the Check Valve is important. Attach the Check Valve so that the arrow on the valve points away from the HazLoc Vortex A/C. Suitability of the Check Valve, provided with the HazLoc Vortex A/C, to prevent air from leaking out from the purged and pressurized enclosure must be verified during installation.
7. Mount the Cold Air Muffler inside the enclosure cooler near the HazLoc Vortex A/C. (You will need a surface area of approximately 2” x 9” (50mm x 230mm) to mount the muffler.) (The Muffler can be mounted in any orientation: horizontal or vertical.) Using the supplied Muffler Mounting Clamp (with double sided tape), attach this Clamp at the desired location. (Clean the mounting surfaces so that the double sided tape bonds securely.)  
  
If desired, this Clamp can be permanently mounted to the enclosure using the supplied mounting hardware.  
  
Two 5/32” (4mm) diameter holes positioned on ¾” (19mm) centers must be drilled to mount the Muffler Clamp with the supplied plastic push-rivets.
8. Snap the Cold Air Muffler into the Mounting Clamp.

9. Cut a sufficient length of the 5/8” (16mm) inside diameter vinyl tubing from the supplied VHLDK Cold Air Ducting Kit to connect the outlet of the Check Valve to the Cold Air Muffler. Attach this length of vinyl tubing securely onto the hose barbs of the Check Valve and the Muffler. Ensure that the vinyl tubing has no sharp bends or kinks. Direction of cold air flow through the Muffler is not important.
10. Attach all (or a portion of) the remaining supplied vinyl tubing of the Cold Air Ducting Kit to the opposite hose barb connection on the Cold Air Muffler. Holes can be punched or drilled into this 5/8” (16mm) tubing to distribute the cold air evenly inside your enclosure, or, the entire cold air output can be directed to a heat sensitive component. If the end of the 5/8” (16mm) vinyl tubing is plugged, at least 25 x 1/8” (3mm) diameter holes should be punched or drilled into the tubing to allow the cold air to escape. Use the six self adhesive tubing clamps provided in the kit to locate and hold the vinyl tubing.
11. Connect the compressed air filter to the compressed air inlet on the side of the HazLoc Vortex A/C with a short length of 3/8” pipe (not supplied). Allow the filter to hang at the side of the enclosure as shown in the installation drawing. Use an 11/16” (18mm) wrench to hold the air fitting on the side of the HazLoc Vortex A/C stationary while tightening the pipe connections. Note the air flow direction arrow on top of the filter. See Maintenance section for further recommendations on location of the compressed air filter.
12. Connect the compressed air supply to the inlet of the air filter. See “Compressed Air Supply”.

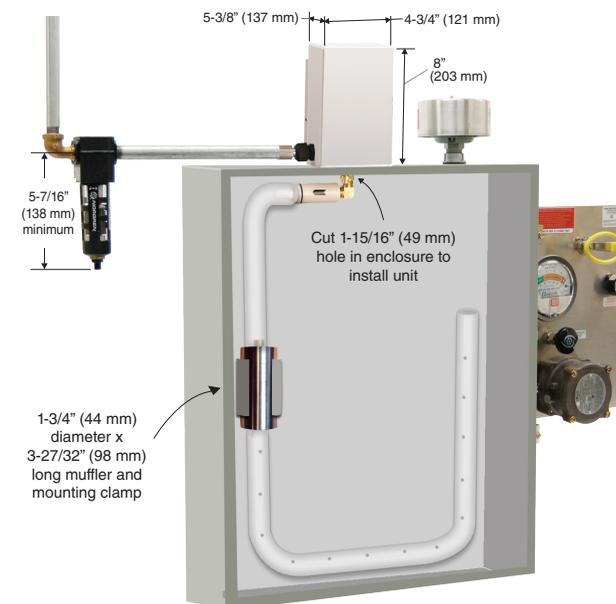

## **HAZARDOUS LOCATION VORTEX A/C** (SHOWN TOP MOUNTED ON CUSTOMER'S ENCLOSURE) 900, 1500 AND 2500 BTUH MODELS (PURGE SYSTEM SHOWN FOR REFERENCE)