

L-VIS

LVIS-3E100 Touch Panel 5.7"

LVIS-100-RE Touch Panel 5.7"

Installation instructions

Instructions de montage






Istruzioni di montaggio

Montageanweisung

Instrucciones de montaje



Montagevoorschrift


Monteringsanvisning

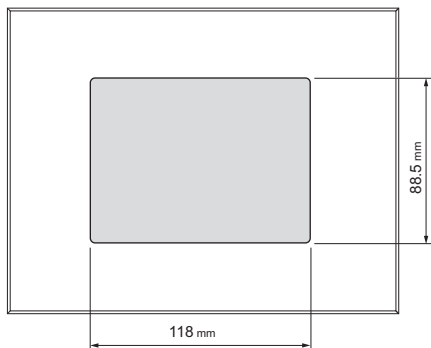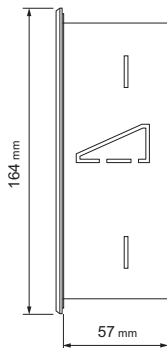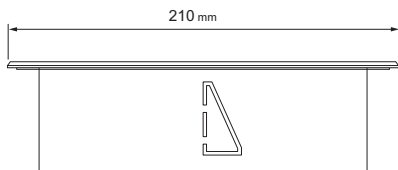

<http://192.168.1.254>
User: admin
Password: loytec4u

 **LOYTEC**

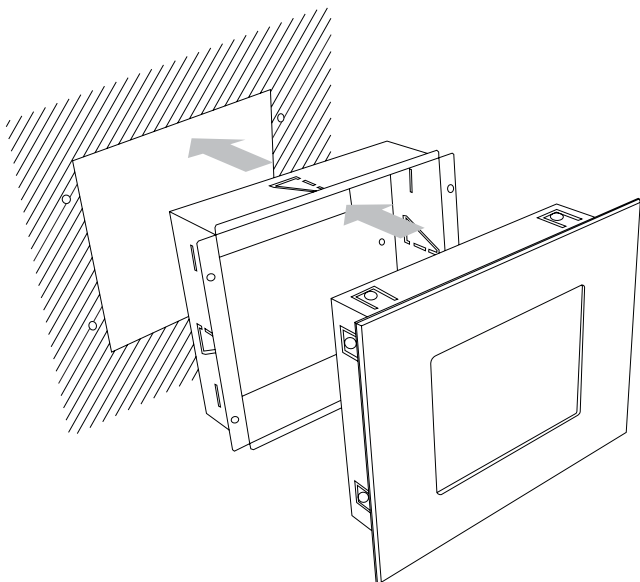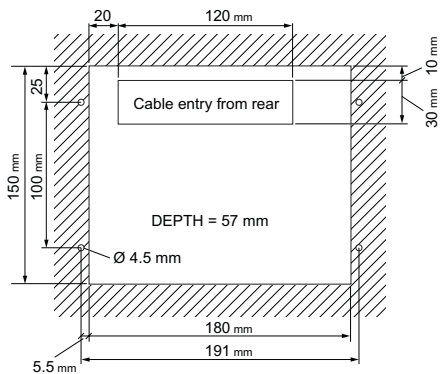

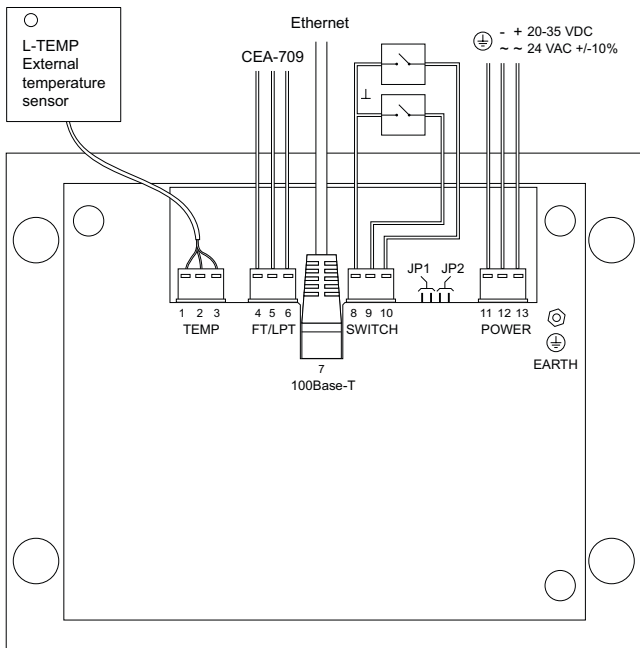

Connectors

1	Temperatur sensor data
2	Temperatur sensor GND
3	Temperatur sensor +3V
4	CEA-709 input EARTH GND
5	CEA-709 input B
6	CEA-709 input A
7	Ethernet 10/100 Base-T (RJ45)
8	Digital input GND
9	Digital input 1
10	Digital input 0
11	Power supply input earth ground
12	Power supply input MINUS
13	Power supply input PLUS
⚠ Do not connect PLUS to GND	


Jumpers


JP1		Normal operation
		Clear configuration
JP2		FT-10/LPT-10 channel active
		CEA-852 (IP-10) channel active



Weidmüller BLZP 5.08/03/180

0,2 - 2,5 mm²



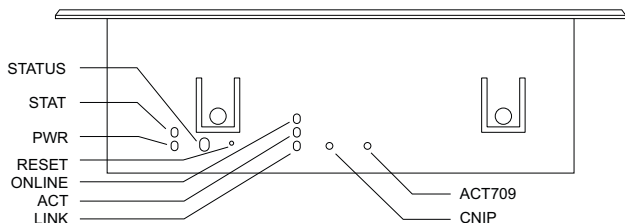

Status LEDs

ACT709	GREEN flashing fast GREEN flashing at 1 Hz RED permanent RED flashing fast	Traffic on CEA-709 port CEA-709 port not commissioned CEA-709 port is damaged Traffic overload on CEA-709 port
CNIP	GREEN YELLOW RED Flashing at 1Hz OFF	IP port is fully functional IP port functional but config. is not up-to-date IP port is non-functional IP port not commissioned IP port not active
LINK	GREEN	Ethernet link
ACT	GREEN flashing	Ethernet traffic
ONLINE	GREEN	Node is in configured online state
PWR	GREEN	Power
STAT	OFF	Normal operation

Buttons


RESET	Reset
STATUS	Send service pin message

Node ID of CEA-709 Port

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

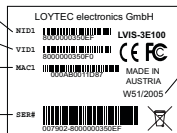

Date Code