UL924 Listed Emergency Lighting Bypass / Shunt RIB® Relays

Description

Our UL924 Listed RIB® relays are suitable for shunting around wall switches, lighting panels, and controllers, which turn on emergency lighting in the event of the loss of normal utility power. Emergency power is supplied by either a generator or inverter system switched by an automatic transfer switch. This is typically done close to the emergency power source.

Our UL924 Listed RIB® relays can be ordered with various configurations of LED indicators, which are used for initial wiring verification and field inspection. Many models allow for remote testing, giving your inspector access during scheduled inspections. Some models are available with a dimming override, enabling full brightness when emergency power is present. Other models can be used when the designated emergency light is needed for normal lighting, both controlled by a single switch.

Operation

When normal power is present, the relay coil is activated, and the emergency panel is fed from normal power. The lighting load can be switched on or off using an individual wall switch. When normal power drops out, the relay coil is deactivated, and N/C contact closes, creating the pathway for the emergency backup power to flow. The automatic transfer switch changes over to backup (generator) power, and the lighting load is illuminated regardless of the position of the wall switch or controller scheme.

Features

- Multi-coil voltage input
- 10 and 20 Amp contact ratings
- 16 Amp electronic ballast rating (specific models)
- 0-10 Vdc dimmer override
- Remote test capability
- NEMA 1 enclosure with bright yellow color for easy identification
- Pre-wired and prepackaged for convenience
- LED indicator of utility and emergency voltage
- Nipple mount, wall mount, or ballast channel mount
- UL 924 Listed & California State Fire Marshall
- DPDT configurations available
- 5-year warranty
- Made in the U.S.A.








Functional Devices, Inc. 101 Commerce Drive Sharpsville, IN 46068 Toll Free: (800) 888-5538 Office: (765) 883-5538 Fax: (765) 883-7505 Email: sales@functionaldevices.com Website: www.functionaldevices.com

ESR2402B

Enclosed Relay 20 Amp SPDT with 24 Vac/dc/208-277 Vac Coil

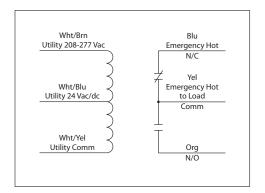

UL924 / 20 AMP EMERGENCY BYPASS / SHUNT RELAY



Specifications

Relays & Contact Type: One (1) SPDT Continuous Duty Coil Expected Relay Life: 10 million cycles minimum mechanical Operating Temperature: -30 to 140° F

Operate Time: 18mS

 $\textbf{Relay Status:} \ \, \mathsf{LED} \ \mathsf{On} = \mathsf{Activated}$

Dimensions: 2.30" x 3.20" x 1.80" with .50" NPT Nipple

Wires: 16", 600V Rated
Approvals: UL Listed, UL924, C-UL

Housing Rating: UL Accepted for Use in Plenum, NEMA 1

Gold Flash: No Override (Test Switch): No

Contact Ratings:

20 Amp Resistive @ 277 Vac 20 Amp Ballast @ 277 Vac 16 Amp Electronic Ballast @ 277 Vac (N/O) 10 Amp Tungsten @ 120 Vac (N/O) 770 VA Pilot Duty @ 120 Vac 1,110 VA Pilot Duty @ 277 Vac

2 HP @ 277 Vac 1 HP @ 120 Vac

Coil Current:

50 mA @ 18 Vac 83 mA @ 24 Vac 69 mA @ 208-277 Vac 33 mA @ 22 Vdc 35 mA @ 24 Vdc 47 mA @ 30 Vdc

Coil Voltage Input:

24 Vac/dc; 208-277 Vac; 50-60 Hz Drop Out = 2.1 Vac / 3.8 Vdc Pull In = 18 Vac / 22 Vdc

Initial Wiring Verification

- 1. Turn OFF Normal Power, Transfer Power, and Wall Switch.
- 2. Wire relay according to wiring diagram.
- 3. Energize Transfer Power. Emergency Light should illuminate.
- 4. Energize Normal Power. Emergency Light will turn OFF.
- 5. Turn ON Wall Switch. Emergency Light should illuminate.

Field Inspection

- 1. Ensure Normal Power and Transfer Power are energized.
- 2. Turn OFF Wall Switch. Light will turn OFF.
- 3. Red LED will be illuminated.
- 4. Turn OFF Normal Power. Red LED will turn OFF. Emergency Light will illuminate.

Shunt Relay Application

Our Emergency Bypass / Shunt Relays are UL924 listed and suitable for shunting around wall switches in order to turn on emergency lighting in the event of loss of normal utility power.

When Normal Power is present, the ESR relay coil is activated and the emergency panel is fed from Normal Power. The lighting load can be switched on/off using an individual wall switch.

When Normal Power drops out, the ESR coil is deactivated and N/C contact falls closed. The Automatic Transfer Switch changes over to backup (generator) power, and the lighting load is illuminated regardless of the position of the wall switch or controller scheme.

