


801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

# INSTALLATION INSTRUCTIONS SERIES 1510, 1570, 1580 EMLOCK (R)

The 1500 Series Emlock is mounted to the underside of the header, on the stop side of the door. A TJ mounting kit (optional) can be used when mounting on the hinge side of the door. (Fig. 1D)

The armature is mounted to the door. A hardware kit is provided to compensate for misalignment and wear of the door, by allowing the armature to pivot on it's center point.

1. Inspect the frame header to determine if an angle bracket or filler plate is required. See Figure 1A, 1B, 1C.

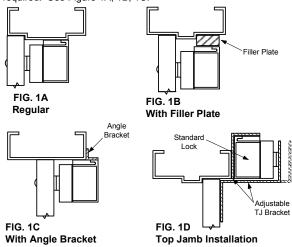

- 2. Fold template as indicated by dotted line. For single doors, locate template against the door and header on the lock jamb side of the
- 3. Mark and drill holes as indicated bt template. For armature plate hole preparation, see Figure 2A, 2B, 2C.
- 4. Mount armature to door. To determine proper hardware (provided), see Figure 2A, 2B, 2C.
- 5. Install mounting plate to header with the interlock detail away from the door side of the stop, with #10 Flt Hd. Screws provided.

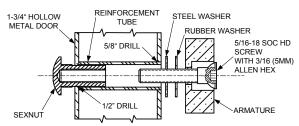


FIG. 2A HOLLOW METAL DOOR

From Sexnut side of door, drill exactly 1/2" hole thru one metal thickness only. From Armature side of door, drill 5/8" hole to insert reinforcement tube. Press in sexnut and reinforcement tube all the way and mount armature to door using hardware provided per Figure 2B.

6. Holding the magnet housing at each end, engage the entire length of the interlock detail, by pushing towards the door. (If necessary, tap with a soft hammer to ensure proper alignment and engagement).

Caution: The lock body must be held in place until secured with mounting screws. Screws provided inside the housing at each end. Tighten the screws and check alignment.

7. Test operation. When all is operating properly, tighten all screws. Install anti-tamper plugs over socket head screw using a soft hammer to avoid damage to the housing.

Electromagnet and armature should be handled carefully. Any damage to the surface such as paint, burrs, dirt and rust may hinder bonding of surface and reduce holding power.

#### SHOULD THE SURFACE PLATING BE DAMAGED:

Do not touch the lock face with your hands.

Using a soft, clean, dry cloth or abrasive cloth (i.e., Scotch-Brite), clean lock face. Do not use sand paper.

A rust inhibitor such as M1, manufactured by Starret, or LPS3, manufactured by LPS Laboratories (available at most hardware stores) can then be applied.

Apply a coat of inhibitor to armature face also.

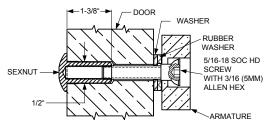


FIG. 2B SOLID DOOR

Drill 3/8" hole thru door. From sexnut side of door, drill exactly 1/2" hole, 1-3/8" deep. Mount armature to door with hardware provided per Figure 2A.

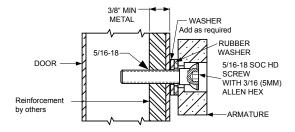


FIG. 2C REINFORCED DOOR Drill and tap for 5/16-18 machine screw. Mount armature to door with hardware provided per Figure 2C.


Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com

#### **OPTIONAL:** 1511-DF DRILL FIXTURE

Drill many doors and frames in a fraction of the time.

## **ELECTRICAL SPECIFICATIONS**

Voltage kickback protection standard

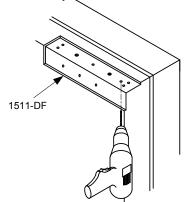

SERIES	1510	1570	1580
INPUT VOLTAGE (VDC)	12/24	12/24	12/24
POWER CONSUMPTION (mA)	700/350	250/125	440/220
COIL RESISTANCE (OHMS)	35* (PER COIL)	100* (PER COIL)	60* (PER COIL)
HOLDING FORCE (LBS)	1650	1200	650

**1580 SERIES CONNECTIONS** 

**ELECTROMAGNET** 

PLUG CONNECTION

FIG. 3B

BAS

**AVAILABLE OPTIONS** 

RED

BRN

\*NOTE: For a proper coil resistance reading, turn off the DC voltage. Use an ohmmeter and measure the resistance between the pins of the plug connector positions E1-E2 and E3-E4


NOT USED


COM

CLOSED

LOCK PWR

## 1510, 1570 SERIES CONNECTIONS

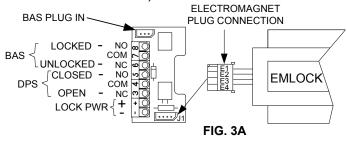

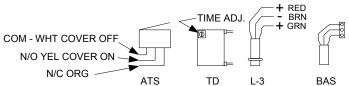

# AVAILABLE OPTIONS

ATS Anti-Tamper Switch
BAS Magnetic Bond Sensor
DPS Door Position Switch
LED Tri-Color LED Red or Green
Both on = Yellow
TD TIME DELAY (1-30 sec)

SPDT, DRY, SPDT, DRY, SPDT, DRY, 20 mA 40 mA BAS Magnetic Bond Sensor
DPS Door Position Switch
LED Tri-Color LED Red or Green
Both on = Yellow

L-3

ensor SPST, No, Dry itch SPDT, Dry I or Green 20 mA 40 mA

COM GRN N/O BLU

**EMLOCK** 

## All switches rated @ 250 mA @ 30 VDC

20 mA

## **ELECTRICAL INSTALLATION**

- Use jacketed cable for all wire runs. Refer to the SDC wire gauge chart for proper lock power wire size (18 AWG gauge minimum).
- 2. Use only shielded cable for all signal wires. 22 AWG gauge (minimum) may be used for signal wires up to 1,000 feet.
- 3. All wires must be colored coded.
- Use properly fused power source only. See Electrical Specifications.
- Make all Emlock terminal connections according to Figure 3A or 3B.

## **IMPORTANT NOTES**

INDOOR USE ONLY

Do not run power wires and signal wires in the same cable or conduit.

<u>Do not install a diode</u> in parallel with any magnetic lock. A diode will cause a delay when releasing the door and residual magnetism to occur.

Although SDC recommends the use of a DC power supply, a transformer with an adjacent mounted full wave bridge rectifier may be used. A significant voltage drop will occur when using a full wave bridge rectifier.

Any low voltage condition will cause erratic operation of the optional bond sensor.

When using a full wave bridge rectifier, all access controls and/or release contacts must be located between the Emlock and rectifier to ensure quick release.

## **AWG WIRE CHART**

To determine the correct wire gauge to use on "one circuit" the following information is required:

- 1. The quantity, voltage, and current draw of all lock(s) to be used.
- 2. The distance in feet from the power supply to the furthest lock.

Add together the current draw (amps) of all locks on the same circuit. Cross reference the total amps with the distance between the power source and the furthest lock to determine the wire gauge required. All wiring must be installed in accordance with all state and local codes.

	AMPS	25	50	75	100	150	200	250	300	400	500	1000
	0.25	18	18	18	18	18	16	16	14	14	12	
	0.50	18	18	18	16	16	14	12				
imum	0.75	18	18	16	14	12	12					
/ire	1.00	18	16	14	14	12						

DISTANCE IN FEET FROM POWER SOURCE TO FARTHEST LOCKING DEVICE

	0.25	18	18	18	18	18	16	16	14	14	12	
Minimum	0.50	18	18	18	16	16	14	12				
Wire	0.75	18	18	16	14	12	12					
	1.00	18	16	14	14	12						
Gauge for 12 Volts	1.50	18	14	12	12							
AC or DC	2.00	16	14	12								
AC OI DC	2.50	16	12									

## DISTANCE IN FEET FROM POWER SOURCE TO FARTHEST LOCKING DEVICE


Minimum Wire Gauge for 24 Volts AC or DC	0.25 0.50 0.75 1.00 1.50 2.00	25 18 18 18 18 18 18	50 18 18 18 18 18 16	<b>75</b> 18 18 18 16 16 14	100 18 18 18 16 14 14	150 18 18 16 14 14 12	200 18 16 14 14 12	250 18 16 14 12	300 18 14 12 12	<b>400</b> 16 14 12	<b>500</b> 16 12	<b>1000</b> 16
	2 50	18	10	14	12							

	TROUBLE SHOOTING	
PROBLEM Emlock releases slowly. (residual magnetism)	<b>CAUSE</b> Control switch wired on AC side of power source.	<b>SOLUTION</b> Control switch must be wired on DC side of power supply.
(residual magnetism)		When an AC transformer and rectifier are used, the control switch must be wired between the rectifier and the Emlock.
	Field installed diode in parallel with power input.	Remove diode.
Poor holding force.	Armature installed rigidly.	Armature must pivot loosely from its center mounting point to permit full armature contact.
		Check for proper voltage at the Emlock input. If low, determine if the correct wire gauge is being used to prevent excessive voltage drop.
	Low voltage.	Check power supply load capacity. It must meet or exceed the combined current rating of all locks on the circuit.
	AC voltage input. (Emlock will make a humming noise)	Emlocks require DC input voltage. When AC voltage from a transformer is used, a full wave bridge rectifier must be installed to convert the AC voltage to DC voltage.
No holding force. Door does not lock.	No power.	Check the voltage at the Emlock. If the voltage is low or zero, double check all wire connections and the power supply.
	Input polarity reversed.	Check voltage polarity. Terminal (-) is: Negative. Terminal (+) is: Positive.
	Open circuit in Emlock coil.	Check coil continuity with OHM meter. If reading is high or open, replace the magnet coil. See Fig. 3A and the Resistance Specifications.

Coil shorts or incorrect wiring will blow fuses. Measure the coil for correct resistance. See Fig. 3A and the Resistance

specifications.

Magnet coil short.

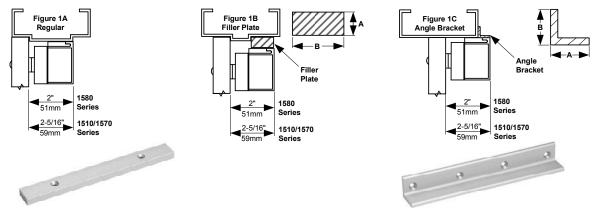

FILLER PLATES: For extension of the stop to provide a proper mounting surface on the underside of the header. See Figure 1B.

#### FOR 1581 SINGLE EMLOCK MODELS

PART#	SIZE	Α	В		_	
FP01		1/8" x	1-1/4'	' (3 x 32mm)		
FP02		1/4" x	1-1/4'	' (6 x 32mm)		8-3/4"
FP03		3/8" x	1-1/4'	' (10 x 32mm)	ł	(222mm)
FP04		1/2" x	1-1/4'	' (13 x 32mm)		(22211111)
FP05		5/8" x	1-1/4"	' (16 x 32mm)		

## FOR 1511, 1571 SINGLE EMLOCK MODELS

PART #	SIZE	A B	•
FP11		1/8" x 1-1/4" (3 x 32mm)	
FP12		1/4" x 1-1/4" (6 x 32mm)	11"
FP13		3/8" x 1-1/4" (10 x 32mm)	(279mm)
FP14		1/2" x 1-1/4" (13 x 32mm)	(27 911111)
FP15		5/8" x 1-1/4" (16 x 32mm)	

## FOR 1582 DOUBLE EMLOCK MODEL

PART#	SIZE	Α	В		_	
FP30		1/8" x	1-1/4"	(3 x 32mm)		
FP31		1/4" x	1-1/4"	(6 x 32mm)		17-1/2"
FP32		3/8" x	1-1/4"	(10 x 32mm)		—— (445mm)
FP33		1/2" x	1-1/4"	(13 x 32mm)		(44311111)
FP34		5/8" x	1-1/4"	(16 x 32mm)		


## FOR 1512, 1572 DOUBLE EMLOCK MODELS

Bracket for 1511, 1571, 1573

TJ82 Double

PART#	SIZE	Α	В		_	i
FP21		1/8" x	1-1/4"	' (3 x 32mm)		
FP22		1/4" x	1-1/4'	' (6 x 32mm)		22"
FP23		3/8" x	1-1/4"	' (10 x 32mm)		(559mm)
FP24		1/2" x	1-1/4"	' (13 x 32mm)		(33311111)
FP25		5/8" x	1-1/4"	' (16 x 32mm)		

• Multiple predrilled and tapped mounting holes to accommodate the use of several different locks on either 4" or 4.5" aluminum frames.

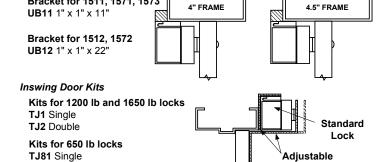

ANGLE BRACKETS: Used as extension on shallow door frames to provide adequate mounting surface. See Figure 1C.

#### FOR 1581 SINGLE EMLOCK MODELS

PART#	SIZE	Α		В	_	
AB01		1"	Х	1"	(25 x 25mm)	
AB02		1"	Х	1-1/2"	(25 x 38mm)	8-3/4"
AB03		1-1/2"	Х	1-1/2"	(38 x 38mm)	(222mm)
AB04		2"	х	1-1/2"	(51 x 38mm)	

## FOR 1511, 1571 SINGLE EMLOCK MODELS

PART#	SIZE	Α		В		_	_	
AB11		1"	Х	1"	$(25 \times$	( 25mm) _		
AB12		1"	Х	1-1/2"	(25)	( 38mm)		11"
AB13		1-1/2"	Х	1-1/2"	(38)	x 38mm)		_ (279mm)
AB14		2"	Х	1-1/2"	(51)	( 38mm)		


#### FOR 1582 DOUBLE EMLOCK MODEL

PART#	SIZE	Α	В	
AB31		1"	x 1" (25 x 25r	nm)
AB32		1"	x 1-1/2" (25 x 38r	,
AB33		1-1/2"	x 1-1/2" (38 x 38)	, <u> </u>
AB34			x 1-1/2" (51 x 38r	, , ,
		_	A = (0. A 00.	,

## FOR 1512, 1572 DOUBLE EMLOCK MODELS

PARI#	SIZE	Α	в_	_
AB21		1"	x 1" (25 x 25mm)	
AB22		1"	x 1-1/2" (25 x 38mm)	22"
AB23		1-1/2"	x 1-1/2" (38 x 38mm)	(559mm)
AB24		2"	x 1-1/2" (51 x 38mm)	

• Field adjustable for 1/2", 5/8" and 3/4" all glass Herculite doors.

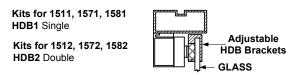

TJ Bracket