

RELAYS

INSTALLATION GUIDE

V120







DANGER ⁄

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel. .
- Read, understand and follow the instructions before installing this product. .
- Turn off all power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm power is off. DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION

Failure to follow these instructions will result in death or serious injury.



- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes.
- Mount this product inside a suitable fire and electrical enclosure.

DIMENSIONS

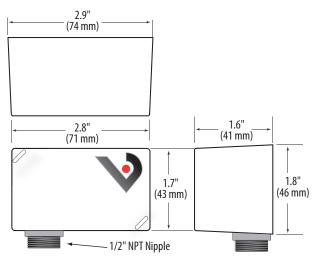

V120 20A SPDT Enclosed Relay

Installer's Specifications

-34°C to 55°C (-29° to 131°F)
10-90% non condensing
Electrical (at rated current): 100,000 cycles
Mechanical (unpowered): 10,000,000 cycles
LED ON=energized
14″ (356mm) min.
UL1015; Coil: 18 AWG; Contacts: 12 AWG
600 VAC RMS
UL508 enclosed device listing, pollution degree 2

INSTALLATION

Disconnect and lock out all power sources before beginning the installation.

- 1. Using the threaded nipple, connect the relay to the desired enclosure through a knock out hole.
- 2. Secure with the conduit nut provided.
- 3. Connect coil wires:
 - Choose the coil common lead (white with yellow stripe) and connect it to the (-) source termination point.
 - Choose either the low voltage (10-30VAC/DC, white with blue stripe) or high voltage (120VAC, white with black stripe) lead, depending on the application requirements, and connect it to the (+) source termination point.*

4. Connect relay contacts:

- Choose the relay common wire (yellow) and connect to the switched load.
- · Choose the relay N.O. (orange) and/or* N.C. (blue) lead and connect to the switched load.

5. Secure the enclosure and reconnect power.

* Isolate or insulate all non-terminated wires according to local electrical code requirements, i.e. wire nut.

Z203094-0D

04122


Alta Labs, Enercept, Enspector, Hawkeye, Trustat, Veris, and the Veris 'V' logo are trademarks or registered trademarks of Veris Industries, L.L.C. in the USA and/or other countries.



V120

WIRING COLOR CODES

WIRING EXAMPLE

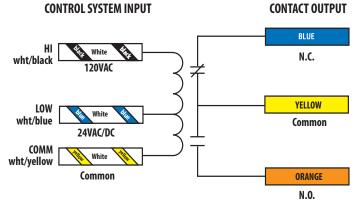

CONTACT AND COIL SPECIFICATIONS

TYPICAL COIL PERFORMANCE			
Voltage	Coil	Current	
	AC	DC	
24V	75mA	32mA	
120V	42mA	-	

CONTACT RATINGS
Resistive 20A@277VAC, 28VDC
Motor 120VAC, 1HP
277VAC, 2HP
Pilot Duty A300
Ballast 277VAC, 20A N.O.
277VAC, 10A N.C.
Tungsten 120VAC, 10A N.O.
120VAC, 2A N.C.

Nipple mount directly to a panel

Nipple mount to 4x electrical box

